


Joydeem

多功能破壁料理机 JD-D16

Multi-functional Blender

使用说明书

USER MANUAL

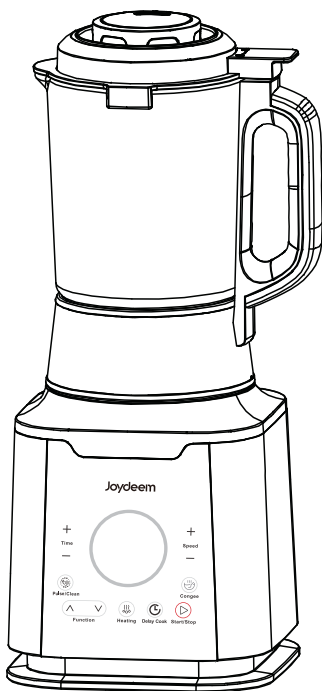

产品以实物为准

This product shall be subject to the real object

感谢您购买本产品, 使用前请仔细阅读本说明书内容

Please read the instructions carefully before use

目 录

一、使用安全说明	1
二、安全注意事项	2
三、部件示意图	3
四、使用说明	5
五、使用方法	7
六、清洁与保养	9
七、产品技术参数	10
八、电路原理图	10
九、异常分析及处理	10
十、售后服务政策	11

一、使用安全说明



警告 未按使用说明
操作会有危险。



注意 违章操作可能损坏您
的物品、财产、甚至会
危害到您的人身安全。

- 使用时请详细阅读本手册操作指示，并妥善保管，以供日后参考。
- 请严格遵守以下标示，无视该标示或操作失误，都可能会造成重大事故或者他人伤害的发生。因此，请遵循以下指示。（此产品仅适用于家用）
- 如果电源线软线损坏，为了避免危险，必须由制造商或其维修部或类似的专职人员来更换。

注 意

	使用本产品前，请详细阅读本说明书之各项说明。		使用的电源应是电压120V~，电流15A以上。
	请勿将本产品用于超出其功能范围的用途。		切勿让儿童操作本产品。
	当电源线，插头，破损或功能失效时，请停止使用本产品。		请勿让电源线接触锋利边角或高温表面。
	本产品必须放置在平稳，可靠的工作台面上操作。		拔插头时请握住插头，请勿拉扯电源线。
	请勿在户外使用。		请勿将本产品浸入水中或任何其它液体中。
	为了确保安全，请勿擅自拆卸本产品。如有异常，请送至公司各地服务中心或经销处，由合格的维修人员予以检修。		

二、安全注意事项

■ 特别提示

为保证使用安全，避免对您和他人造成伤害和财产损失，请您务必遵守以下安全注意事项。

不遵守安全警告而错误使用可能导致事故发生。

本产品未考虑以下情况：

- 无人照看的幼儿和残疾人对器具的使用。
- 幼儿玩耍器具的情况。

⊙ 表示【禁止】的内容

- 本产品工作时严禁空载运行或超负载使用。
- 本产品工作时，禁止移动产品或触碰正在运动中的部件，避免意外伤害。
- 禁止将电源线挂于锋利的物体上，且不能连接到可移动的物体。
- 禁止在倾斜的台面或不稳定的台面使用本产品。
- 禁止加入热的食材进行加热功能制作（不超过80℃）。
- 请勿使用劣质排插转接，以免引起火灾和人身伤害。
- 禁止将产品放置在太靠近炉具的地方，以免产品受损或引起火灾和人身伤害。

❗ 表示【强制】的内容

- 请勿让儿童单独操作使用，确保不会将产品当成玩具，要放在婴儿接触不到的地方。老年人或残障人士以及无使用经验的人应该在监护和指导下使用本产品。
- 如插头或其他零件损坏时，必须停止使用本产品，并到指定维修点，请专业人士更换或维修，以免引起伤害。
- 在装上或取下搅拌杯及杯盖等任何部件前，请确保产品处于断电状态。
- 若电源线损坏，为了避免危险，必须由制造商、其维修部或类似部门的专业人员更换。
- 请勿使用本产品以外的附件和配件，以免引起火灾和人身伤害。
- 请勿在无人看管的情况下运行本产品。


⚠ 可能造成人员伤亡的事项

- 使用前请确认电压是否和本产品规格一致(120V~60Hz)，以免引起产品安全危险和损坏。
- 本产品高速连续运行时间不超过6分钟，在操作中，如发现机座过热现象，应停机约20分钟，待其冷却后方可继续操作。

⚠ 可能造成轻伤或者财产损失的事项

- 本产品内设过热保护装置，当非正常使用或电机严重超载运行时，产品会自动停机保护，如保护30分钟后，仍不能启动，产品需送本公司维修网点维修，请勿自行拆机。
- 使用产品后，清洗干净与食物接触的部位，避免长时不用残留物腐蚀散发出异味。
- 若产品在使用过程中出现卡死现象，请立即关掉电源，拔下电源的插头，取下容器，将卡死刀片的材料取出，待电机冷却后方可继续使用。
- 产品使用后，请及时拔掉电源及清洗产品。
- 产品使用前，请确保桌台清洁，及时清理油污。
- 本产品与其它厨房电器的最佳距离请保持30厘米以上。

三、部件示意图

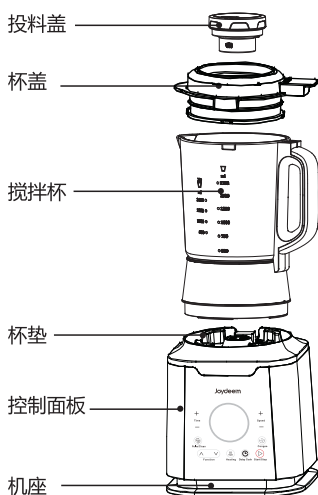

附件：



部件名称	功能介绍
投料盖	防止食材溅出，取下后搅拌棒可伸入搅拌杯，运行过程中打开可添加食材。
杯盖	防止食材溅出，杯盖安装到位后方可启动产品，运行过程中不得打开。
搅拌杯	装食材容器，内含粉碎食材刀片。
杯垫	用于放置搅拌杯、减少噪音。
机座	产品动力源。
控制面板	控制机器工作方式。
搅拌棒	用于辅助食材粉碎。
毛刷	用于清洁产品。
量杯	用于量取干豆、大米等食材。
炖盅杯盖	使用炖盅制作食谱中各种炖品时使用
炖盅	用于制作食谱中各种炖品，如燕窝

△ 使用注意：

因产品外观各有差异，上图仅供参考，具体请以包装箱内实物为准。


■ 玻璃炖盅介绍

为满足用户更全面的日常使用需求，破壁料理机另外加入了支架式炖盅的设计。用户可通过炖盅隔水炖煮食物，玻璃材质炖盅可直接观测食物烹煮状态。

△ 注意：请勿在使用炖盅杯盖的情况下进行倒水操作，以免炖盅与炖盅杯盖掉落造成烫伤危险。

■ 玻璃炖盅安装：

1、将炖盅置于炖盅杯盖内。

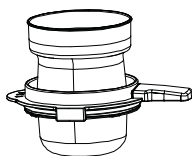


2、将炖盅杯盖连炖盅一起提起。




3、安装在料理杯上并盖上盖子。

当杯盖手柄位与料理杯手柄位对齐，机器显示“0000”，说明已经安装完成。

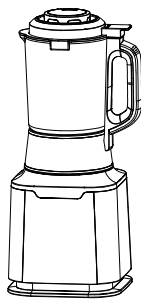

△ 注意：使用玻璃炖盅时，仅使用燕窝，药膳，温奶，加热这四个功能。

■ 液晶款控制面板说明：

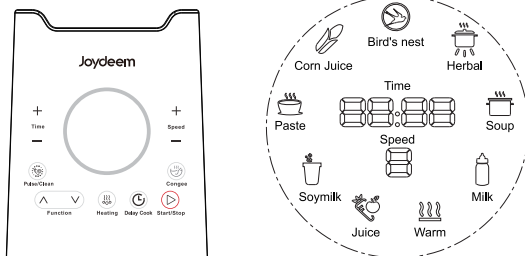


(仅为示意图，以实物为准。)

序号	模式	用途
1	果蔬 Juice	果蔬搅打果蔬汁、混合果汁等。
2	豆浆 Soymilk	制作以大豆为主,按食谱搭配口味的各种豆浆。
3	米糊 Paste	制作食谱中的米糊,一般米糊均可选用此功能。
4	玉米汁 Corn Juice	制作食谱中的玉米汁。
5	燕窝 Bird' s nest	制作食谱中的燕窝,一般燕窝均可选用此功能。
6	药膳 Herbal	制作食谱中的药膳,一般药膳均可选用此功能。
7	浓汤 Soup	制作食谱中的汤,一般汤均可选用此功能。
8	温奶 Milk	把牛奶倒入炖盅中,温奶。
9	保温 Warm	保温。
10	熬粥 Congee	制作食谱中的养生粥。
11	加热 Heating	用于加热搅拌杯中的食物和液体。
12	点动/清洗Pulse/Clean	适用于搅拌、清洗杯体等。间歇式操作。
13	开始/停止Start/Stop	启动和停止当前功能。
14	预约 Delay Cook	设定倒计时开始时间。
15	功能 Function	功能选择。


功能	操作说明
加热 Heating	时间:60min (不含A过程) A: 以全功率加热到100度; 高原显示补偿:每2s显示温度加1度,直到显示100C。 B 60:00倒计时,以停17s开3s方式加热。
点动/清洗 Pulse/ Clean	长按不松手,机器以8档高速运行50s停止,松手即刻停止,软启动3s。
开始/停止 Start/Stop	开始/停止,单击有效。
∧ ∨ 选择键 Function	功能选择: 点击“∧”由“果蔬”开始顺时针选择;长按“∧”1S后,以0.5S为频率,顺时针自动选择,松开后停止;时间、档位对应显示相应的数值; 选中的液晶图案闪烁(闪烁频率1S),其它图案长亮点击“∨”则开始逆时针选择。
Time时间 “+”“-” Speed档位 “+”“-”	待机状态单击时间或速度“+/-”任意键进入DIY模式。 时间:0-6min可调。 速度:1-8档可调,软启动3s。 备注:当只选择档位,未设定时间时,机器按设定档位运行3min后进入待机状态。
预约 Delay Cook	保温:当不选择任何功能,长按2秒“预约”键进入保温模式,保温温度55°C,保温时间6h。 预约 操作步骤: (1) 选择所需功能后,长按2秒“预约”键进入预约模式,显示屏闪烁切换显示“00:30”(表示预约时间30min)和“55°C”(表示预约保温55°C)。 (2) 通过时间“+”和“-”选择键来调节时间长短,从30min-12h循环。 (3) 单击“开始/停止”启动或者停止。 备注:部分功能无预约功能,如果蔬、保温。

五、使用方法


- 1、将食材切成约2cm大小块状。
(肉类切丁去筋)

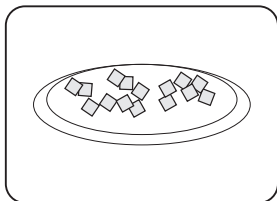


- 3、将量好的食材倒入搅拌杯中。
(注意搅拌杯内不应有其它异物)

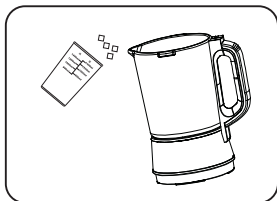


- 5、杯盖两侧扣耳错开对齐杯口凸耳，把杯盖压入搅拌杯，再将杯盖顺时针旋转与杯体扣好，最后将加料盖压紧在杯盖上。(杯体有开盖保护装置，如杯盖未旋盖到位，产品将不通电)

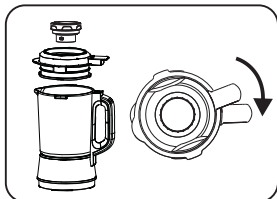


- 7、插上电源线，接通电源时，所有背光灯闪亮后熄灭，蜂鸣器响一声，时间显示“0000”
(若杯盖未旋合到位闪烁显示“----”)

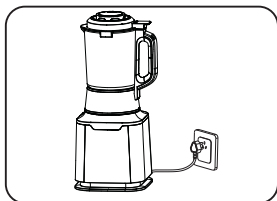


- 2、使用小量杯参照食谱比例以及依据个人口味量取适量的食材。

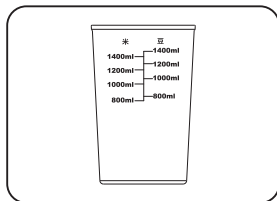


- 4、向搅拌杯内的加入适量清水。
(按食谱的配比酌量加减)

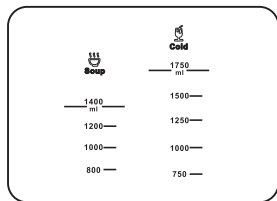


- 6、将搅拌杯按正确的位置放在主机上。

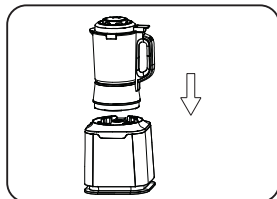


- 8、点选相应功能键。(如：米糊)

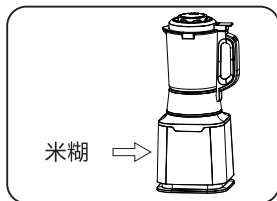


- 9、按下“开始/停止”按键，开始工作!
(工作中有忽快忽慢声音，属正常现象)

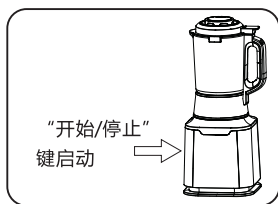


- 11、拔除电源线，取下搅拌杯打开杯盖。
(打开杯盖时注意涌出蒸汽，防止烫伤!)

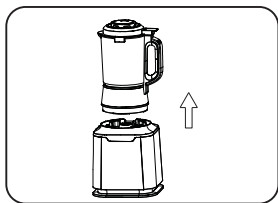


- 13、及时清洗搅拌杯内部，并用拧干的湿布清洁杯体外部。

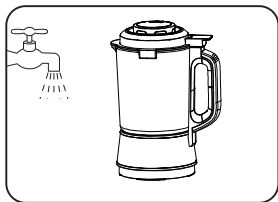


- 10、工作完成，蜂鸣器响三声，机器
回到待机状态。

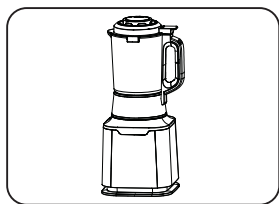

- 12、倒出浆液，及依据个人口味加入
调味料。(倒浆时请勿过急，防止
液体溅出)

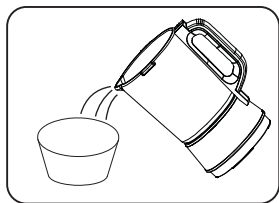

- 14、擦拭机器表面水渍后，将主机与
搅拌杯分开置于阴凉通风处风干，
防止产生异味。

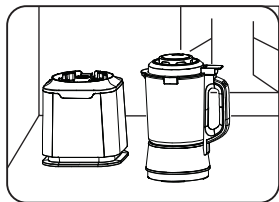


△ 注意：

- 1、制作粥、糊、汤等必须选择对应的功能按键，否则制作出来的饮品会出现口感不好，煮不透等情况。严重时将造成溢出或者糊底！
- 2、食谱中的食材份量均按照标准水位进行配备，用户在使用时请根据水量及食物种类调整食材总份量，其中加热功能不宜超过1200ml（豆浆类、糊类、粥类功能建议采用1000ml，最大容量不宜超过1200ml），冷饮功能最高不超过1600ml，否则易造成溢出或者糊底。
- 3、在制作果蔬类饮品时，请预先将有核的食材去核后方可放入搅拌杯中，并加入适量的饮用水或牛奶，坚硬的果核会降低搅拌刀的锋利度。

- 4、请勿用本产品直接加热牛奶、豆浆、冷米糊等粘稠的液体，否则会造成“糊底”等的烧焦情况，产生异味。
- 5、机器在工作过程中，搅拌杯内液体沸腾后请小心喷出水蒸汽和溅出的热水。工作过程中切勿揭开杯盖。
- 6、机器制作过程中请勿在杯体内添加砂糖、黑糖等调味料，以避免调味料在加热时粘着在搅拌杯底部。
- 7、接通电源前，请务必确保搅拌杯、杯盖及投料盖安装到位。
- 8、产品通电时，严禁将手或尖锐硬物等伸入搅拌杯内，以免受伤或使产品受损。
- 9、在组装、拆卸、清洗和维护过程中注意产品可能的锐利边缘或器件割伤划伤，必要时佩戴手套。

■ 量杯使用说明

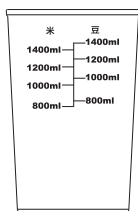

- 1、制作米糊/熬粥时，请参考“米”的容量。

量杯量取米量到达800mL刻度时，需加水至800mL刻度位置制作。
1000mL, 1200mL可参考刻度加入相应的水。

- 2、制作豆浆时，请参考“豆”的容量。

量杯量取干豆到达800mL刻度时，需加水至800mL刻度位置制作。
1000mL, 1200mL可参考刻度加入相应的水。

六、清洁保养

■ 清洁

- 1、搅拌杯在打完果汁倒出后，即刻加入清水，间歇性使用“点动/清洗”功能进行搅拌杯清洗。
- 2、断开电源，主体及搅拌杯外部可用拧干的布擦拭，请勿将主体和杯体浸入水或其他液体中清洗，也不能在水或其他液体下冲洗，防止漏电或器件损坏。
- 3、清洗时，用清水冲洗搅拌杯内部及配件，并抹干；刀片非常锋利，清洗时注意防护以免割伤。
- 4、请勿使用钢丝球、研磨性清洁剂或腐蚀性液体（比如汽油或丙酮）来清洁产品。
- 5、如部件被果蔬汁染色，清洗前加几滴食用油擦洗后再用水冲洗即可。


■ 保养

- 1、本产品宜经常使用，以保持电机干爽。
- 2、如长期不用，请将本产品保存在干燥通风处，以防止电机受潮。

七、产品技术参数

产品型号	额定电压	额定频率	加热功率	搅拌功率	冷饮	热饮	产品尺寸	产品重量
JD-D16	120V~	60Hz	800W	1200W	1750ml	1400ml	190x200x490MM	5.75KG

八、电路原理图

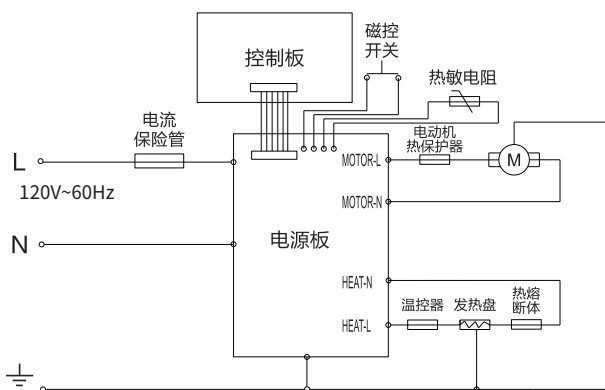

九、异常分析及处理

■ 异常处理

- 1、产品如出现异常情况如：异常噪音、气味、烟雾等，应立即切断电源，停止使用。
- 2、如出现产品不能工作，请检查电源线是否连接好，是否正常启动，搅拌杯是否安装到位，杯盖是否旋合到位。
- 3、如经上述检查，产品还是不能工作，请联系售后进行咨询和维修，或请专业人员进行处理。

■ 故障分析及排除

故障	可能性原因分析	解决对策
显示屏不亮	电源线未插好	检查电源线并保证插好
	机器故障	联系客服维修
显示屏亮，产品不工作	杯盖未盖到位	将杯盖重新盖好，装到位后会听到蜂鸣器短鸣声
	选功能后，未按启动键	选好功能后，再按下功能键
	杯内未加水，熔断器起保护	请正确加水到相应的水位线
	工作过程中出现鸣叫报警	先拔掉电源，再通电后按正常工作步骤进行操作
	机器故障	联系客服维修
加热不停止	机器故障	联系客服维修
按键无反应	断电间隔短，系统未复位	断电3分钟后再通电使用
	产品已在执行程序	正常现象
	机器故障	联系客服维修
食材打不碎	加水过多或过少	请加水至正确的水位线
	电源电压过低	可用家用稳压器
	食材太多或太少	请按食谱配方操作
	产品本身故障	联系客服维修
糊底	杯内未清洗干净	请将杯内清洗干净再使用
	食材加太多	请按食谱配方操作
	按错功能键	选择正确的功能键
异常哨声	产品磨合	偶有哨声属于正常情况
使用过程中出现溢出情况	当地电压波动导致	请减少加水量(例如,减少200ml)
	食物配比不当	请减少食材比例
	非上述情况	联系客服服务中心
显示屏显示E1	过流保护	断开电源,拔掉插头,让机器自然冷却15min;食材加入过多或切块状过大,导致电机过载保护
显示屏显示E2	热敏电阻短路或开路	断开电源,拔掉插头,注意上下连接器耦合良好,耦合器表面保持干燥
显示屏显示E3	发热盘坏	断开电源,拔掉插头,注意上下连接器耦合良好,耦合器表面保持干燥
显示屏显示E4	过零失效	断开电源,拔掉插头,注意上下连接器耦合良好,耦合器表面保持干燥
显示屏显示EA	防溢错误	断开电源,拔掉插头,注意上下连接器耦合良好,耦合器表面保持干燥,杯盖旋合到位,防溢圈清洁干净

十、售后服务政策

PandaBrands Inc保证本产品自购买之日起一年内无材料或工艺缺陷，前提是本产品在家环境中使用。

本产品有限保修不包括由于不当操作、意外损坏或非专业人员进行或试图进行维修而导致的故障。如果产品在30天内购买，符合上述保修条件的缺陷产品将免费更换或维修。超过30天但在最初购买后一年内，

产品将免费维修或更换，客户将负责运费。购买一年后，客户将承担零件、人工和运输费用。

本产品不用于商业用途，因此，此类商业用途将使本保修失效。

欲了解更多信息，请联系客户服务部门service@pandabrands.com。













Contents

Direction for Safety in Use	13
Attention to Safety	14
Schematic Diagram	15
of Components	
Direction for Use	17
Usage	20
Cleaning and Maintenance	23
Specification	23
Schematic Circuit Diagram	24
Analysis and Disposal of	24
Abnormal Circumstances	
After-sales service policy	25

Direction for Safety in Use

 Warning Any operation not based on the direction for use will cause danger.	 Attention Any operation against rules may damage your goods and/or properties, and even harm your personal safety.
--	---

- When using this product, you are required to carefully read the operation instructions in this Manual and keep this Manual property for future reference.
- Please strictly abide by the following marks. Ignoring these marks or operation mistakes may cause major accidents or hurt others. Therefore, please abide by the following marks. (This product is only applicable to household purposes.)
- If the power line is damaged, it must be replaced by the professional personnel from the manufacturer or its maintenance department or similar department in order to avoid danger.

 Attention			
	Please carefully read various instructions in this Manual before using this product.		The power supply to use should be of 120V~ and more than 15A.
	Please do not use this product for any purpose beyond its functional scope.		Be sure not to allow a child to operate this product.
	Please stop using this product when the power line or plug is damaged or any of its function is disabled.		Please do not make the power line touch any sharp edge or corner or high-temperature surface.
	This product must be operated on a balanced and reliable worktable.		When pulling the plug, you are required to hold the plug but not pull the power line.
	Please do not use this product outdoors.		Please do not soak this product in water or any other liquid.
	Please do not dismantle this product arbitrarily in order to ensure safety. In case of any abnormal circumstance, please send this product to local service center or agency of this company and invite qualified maintenance personnel to overhaul it.		

Attention to Safety

■ Special Tips

Be sure to abide by the following matters needing attention to ensure safety in use and thus avoid causing injuries and property loss to you and others.

Failure to abide by safety warnings and wrong use may cause accidents.

This product does not consider the following circumstances:

- Any infant without supervision or disabled person uses this product.
- Any infant plays with this product.

The mark “⊘” represents the “prohibited” content.


- It is strictly prohibited to operate this product under no load or at an overload when it is working.
- It is prohibited to move this product or touch any of its components in motion in order to avoid any accidental injury when it is working.
- It is prohibited to hang the power line of this product on any sharp object and it is not allowed to connect the power line to any mobile object.
- It is prohibited to use this product on an inclined or unstable worktable.
- Please do not use an inferior extension socket in order to avoid a fire accident or personal injury.
- It is prohibited to place this product in a place too close to a stove in order to prevent it from being damaged or causing a fire accident or personal injury.

The mark “ⓘ” represents the “mandatory” content.

- Please do not allow a child to independently operate or use this product, please ensure that a child will not treat this product as a toy, and it is necessary to place this product in a place out of a baby's reach. Any person, who is old, disabled or without experience in use, should use this product with guardianship and guidance.
- When the plug or any other component is damaged, it is a must to stop using this product and invite professional personnel of any designated maintenance center to replace or repair this product and thus prevent it from causing any injury.
- When installing or removing the glass jar and lid, etc. Please make sure that the product is power off.
- If the power line is damaged, it must be replaced by the professional personnel from the manufacturer or its maintenance department or similar department in order to avoid danger.
- Please do not use any accessory or fitting other than original accessories and fittings of this product in order to avoid fire accidents and personal injuries.
- Please do not allow any infant without supervision to run this product.


The mark “▲” represents the matters possibly causing casualties.

- Before using this product, it is necessary to ensure that the voltage is consistent with its specification (120V~60Hz) in order to prevent this product from suffering any safety-related danger and damage.
- The high-speed continuous running time of this product does NOT exceed 6 minutes. If you find that the base is overheating, you should stop using it for about 20 minutes. Wait for it to be cool before using.

The mark “” represents the matters possibly causing slight injuries or property loss.

- This product is equipped with built-in overheating protector. When it is used abnormally or its motor runs at a serious overload, this product will automatically stop for protection. If this product cannot be started after it is protected for 30 minutes, it is necessary to send this product to a maintenance outlet of this company for maintenance and it is not allowed to dismantle this product arbitrarily.
- After using this product, it is necessary to clean all the positions touching food in order to prevent this product from sending forth peculiar smell after being not used for a long time.
- If this product gets stuck during its use, please immediately turn off it, pull out the power plug, remove the container, take out the material(s) leading this product to getting stuck and then continue using it after the motor is cooled.
- After using this product, you are required to timely pull out the power plug and clean this product.
- Before using this product, you are required to ensure that the worktable is clean and greasy dirt is eliminated timely.
- Please keep the optimal distance of more than 30 cm between this product and any other kitchen appliance.

Schematic Diagram of Components

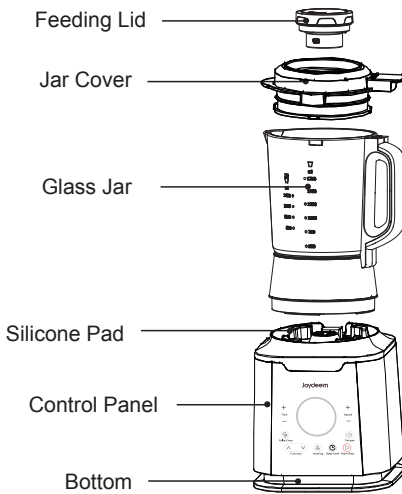

Accessories:



Mixing Bar



Brush



Measuring Cup



Stew Pot



Stew Pot bracket



Glass Lid

Component Name	Introduction to Function
Feeding Lid	It is used to prevent food material(s) from splashing and the stirring rod can be inserted into the glass jar after it is removed.
Jar Cover	It is used to prevent food material(s) from splashing and this product cannot be started until the jar cover is installed in place.
Glass Jar	It is a container holding food material(s), including a knife for smashing food material(s)
Silicone Pad	It is used to rotate the jar and reduce noise.
Bottom	It acts as the power source of this product.
Control Panel	It is used to control the working manner of machine.
Mixing Bar	It is used to give assistance in food smashing (for instance, smoothie function).
Brush	It is used to clean this product.
Measuring Cup	It is used to measure and get food materials such as dry beans and rice.
Stew Pot	Used to make stews, such as bird's nest.
Stew Pot bracket	Put the Stew Pot in place.
Glass Lid	Cover the Stew Pot.



Matters Needing Attention to Use:

The above diagram is used for reference only due to difference in appearance of product. Specific diagram is subject to the physical object in the box.

Introduction of glass stew pot


In order to meet users' more comprehensive daily use needs, the multi blender has also added a bracket-type stew cup design. Users can stew food through the stew cup, and the glass stew cup can directly observe the cooking state of the food.



Note: Do not pour water while using the stew cup lid, so as to avoid the risk of scalding due to the fall of the stew cup and stew cup lid.

Glass stew pot installation:

1. Place the stew pot in the bracket.

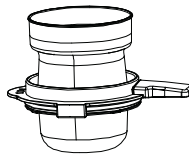


2. Lift the stew pot and bracket together.



3. Install it on the glass jar and cover the lid.

When the handle position of the cup lid is aligned with the handle position of the glass jar, the machine displays "0000", indicating that the installation has been completed.

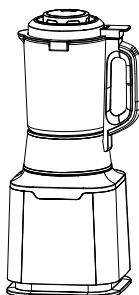



⚠ When using stew pot, use Bird's nest, Herbal, Milk, Heating only.

Direction for Use

■ Notice before Use:

1. The volume should not exceed the maximum scale.
2. The exterior of main body can be wiped with dry cloth. Please neither soak the main body in water or any other liquid nor rinse the main body under water or any other liquid in order to avoid leakage of electricity or prevent components of this product from being damaged.
3. When cleaning this product, please rinse its cup body and parts with clean water and then dry it with cloth; the cutter blade is very sharp, so you should be careful in order to prevent it from hurting you when cleaning it. You can wear protective gloves.
4. Please do not clean this product with any steel wire ball, abrasive detergent or corrosive liquid (such as gasoline or acetone).
5. The maximum volume should not exceed 1400mL when this product is used to make soy-bean milk.
6. Please clean the food material(s) and cut it or them into pieces with the length of a side not exceeding 2cm.

■ Description of Control Panel:

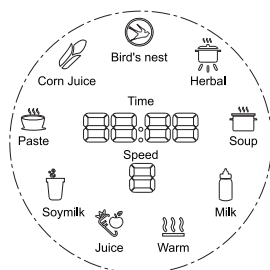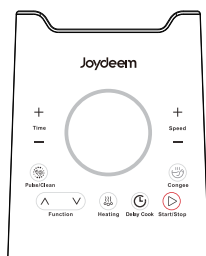

(This picture is just a schematic diagram and the specific diagram should be subject to the physical object.)


Mode	Purpose(s)
Juice	Fruit and vegetable whipped fruit and vegetable juice, mixed juice, etc.
Soymilk	Make a variety of soy milk based on soybeans and match the taste according to the recipe.
Paste	This function can be used for making rice cereal in the recipe.
Corn Juice	Make the corn juice in the recipe.
Bird's nest	This function can be used to make bird's nest in the recipe.
Herbal	This function can be used to make medicated meals in recipes.
Soup	This function can be used to make soup in recipes.
Milk	Pour the milk into the stew pot to warm the milk.
Warm	Keep warm.
Congee	Make the healthy congee in the recipe.
Heating	Used to heat the food and liquid in the glass jar.
Pulse/Clean	Suitable for mixing, cleaning the cup body, etc. Intermittent operation.
Start/Stop	Start and stop the current function.
Delay Cook	Set the countdown start time.
Function	Function selection.

Function	Instructions
Heating	Time: 60min (Excluding Process A) A: Heat to 100°C with full power; Plateau display compensation: every 2s display temperature plus 1 degree until it displays 100°C. B 60:00 countdown, heating by stopping 17s and opening 3s.
Pulse/Clean	Long press without letting go, the machine will stop at 8 gears at high speed for 50s, and stop immediately after letting go.
Start/Stop	Click to activate.
^ v Function	Click "^" to select clockwise from "Juice"; long press "^" for 1S, 0.5S is the frequency, which is automatically selected clockwise, and stops when released; the time and gear position correspond to the corresponding values; The selected liquid crystal pattern flickers (flicker frequency 1S), other patterns are always on; Click "v" to start counterclockwise selection.
Time "+ "-" Speed "+ "-"	In standby mode, click any key of time or speed "+/-" to enter DIY mode Time: 0-6min adjustable. Speed: 1-8 gears adjustable, soft start 3s. Remarks: When only the gear is selected and the time is not set, the machine will enter the standby state after running in the set gear for 3 minutes.


Function	Instructions
Delay Cook	<p>Warm: When no function is selected, long press the "Delay Cook" button to enter the warm mode, the temperature is 55°C, and the time is 6h.</p> <p>Appointment setting.</p> <p>Steps:</p> <ol style="list-style-type: none"> (1) After selecting the desired function, press and hold the "Delay cook" for 2 seconds to enter the appointment mode, and it flashes and switches to display "00:30" (representing the reservation time 30min) and "55°C" (representing the reserved heat preservation 55°C). (2) Adjusted through Time "+" and "-", 30min-12h. (3) Click "Start/Stop" button to start or stop. <p>Remarks: Some functions do not have an appointment function,e.g. Juice, Warm.</p>

Usage


- 1. Cut the food material(s) into pieces about 2cm.

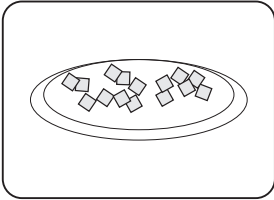


- 2. Use a small measuring cup to get an appropriate amount of food material(s) as per the proportions in recipes and personal tastes.

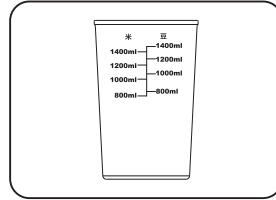


- 3. Pour the measured food material(s) into the jar.

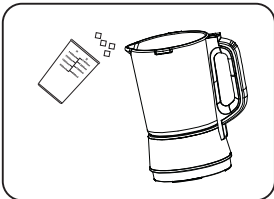


- 4. Add an appropriate amount of clean water to the jar. (Increase or decrease an appropriate amount of water as per the proportions in recipes)

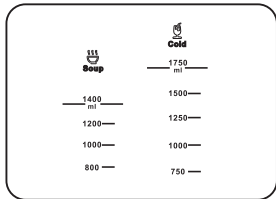


- 5. Align the ears on both sides of the jar cover at the lugs of the rim of jar in a staggered manner, press the jar cover into the jar, and then rotate the jar cover clockwise till it buckles the jar body and finally press the feeding lid tightly onto the jar cover (where in the jar body is equipped with an uncovering protective device which will not power on this product if the jar cover is not rotated in place).

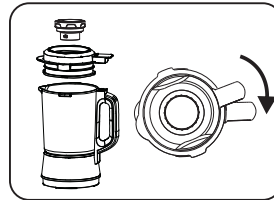


- 6. Place the jar at the right position on the host machine.

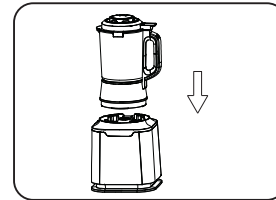


7. After the power line is plugged and this product is powered on, all its backlights twinkle and then go out, the buzzer sounds once and the time \ displays “----”.

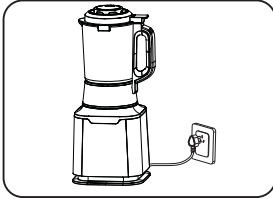


8. Select function buttons by jogging.

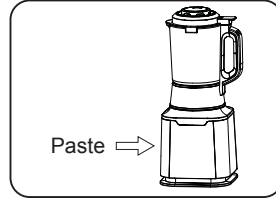


9. Press the “Start/Stop” button when this product starts to work!
(The fast and slow sound during the work of this product belongs to normal design.)

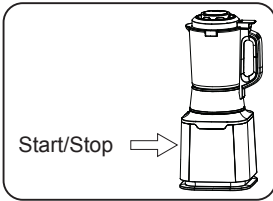


10. When this product finishes its work, the buzzer sounds three times and then this product returns to the standby mode.

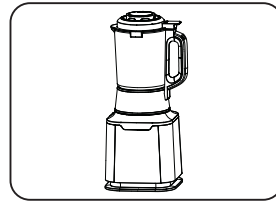


11. Pull out the power line, remove the jar and then open the jar cover.
(Note: It is necessary to prevent the gushing steam from scalding you when opening the jar cover!)

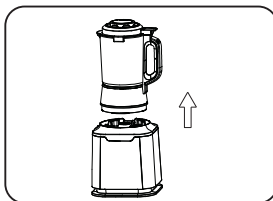


12. Pour out the seriflux and add seasonings as per personal taste.
(Please do not pour out the seriflux too violently in order to prevent the liquid from splashing.)

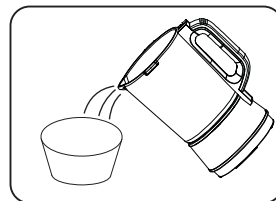

13. Please timely clean the interior of the jar and use wet cloth to clean the shell of this product.

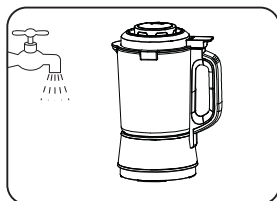


14. After rubbing away the water stains on the surface of this product, separately place the host machine and the jar in a cool and well-ventilated place for drying in order to avoid the appearance of peculiar smell.

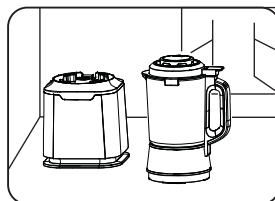

⚠ Matters Needing Attention:

1. When making soup, paste, porridge and so on, it is a must to select corresponding functional buttons. Otherwise, the made beverage may be of poor taste, not cooked thoroughly and suffer other problems. In a serious case, the beverage even will overflow or adhere to the bottom!
2. The amount of ingredients in the recipe is prepared according to the standard water level. The user should adjust the total amount of ingredients according to the amount of water and the type of food when using it. The heating function should not exceed 1200ml (1000ml is recommended for soy milk, paste, and porridge functions, the maximum is The capacity should not exceed 1200ml), and the cold drink function should not exceed 1600ml, otherwise it will easily cause overflow or muddy bottom.
3. When making fruit and vegetable drinks, please remove the pitted ingredients before putting them into the mixing cup, and add an appropriate amount of drinking water or milk. The hard pits can easily reduce the sharpness of the mixing knife.
4. Do not use this product to directly heat viscous liquids such as milk, soy milk, cold rice paste, etc., otherwise it will cause "pasty bottom" and other burning conditions and produce peculiar smell.
5. When the machine is working, please be careful to spray out water vapor and splashed hot water after the liquid in the mixing cup boils. Do not open the lid of the cup during work.
6. Do not add seasonings such as granulated sugar, brown sugar, etc. to the cup during the machine making process to prevent the seasonings from sticking to the bottom of the mixing cup during heating.
7. Before turning on the power, make sure that the glass jar, lid and feeding cover are installed in place.
8. When the product is energized, it is strictly forbidden to put hands or sharp hard objects into the mixing cup to avoid injury or damage to the product.
9. In the process of assembly, disassembly, cleaning and maintenance, pay attention to possible sharp edges or device cuts and scratches on the product, and wear gloves when necessary.

■ Direction for Use of Measuring Cup

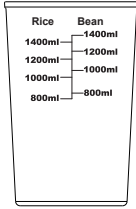

1. Please refer to the volumes of "Rice" when making paste, porridge. When using the measuring cup to get rice reaching the scale of 800mL, it is necessary to add water to the scale of 800mL. You may add the corresponding amounts of water by referring to scales of 1000mL, 1200mL.
2. Please refer to the volumes of "Bean" when making soy milk. When using the measuring cup to get beans reaching the scale of 800mL, it is necessary to add water to the scale of 800mL. You may add the corresponding amounts of water by referring to scales of 1000mL, 1200mL.

Cleaning and Maintenance

■ Cleaning

1. After the juice is poured out of the glass jar, add clean water immediately, and use the "Pulse/Clean" function to clean the glass jar intermittently.
2. Disconnect the power supply. The main body and the outside of the glass jar can be wiped with a wrung cloth. Do not immerse the main body and the cup in water or other liquids, and do not rinse under water or other liquids to prevent leakage or damage to the components.
3. When cleaning, please rinse the interior and accessories of the glass jar with clean water, and wipe them dry; the blade is very sharp, so take care to avoid cuts when cleaning.
4. Do not use steel wire balls, abrasive cleaners or corrosive liquids (such as gasoline or acetone) to clean the product.
5. If the parts are stained with fruit and vegetable juice, add a few drops of edible oil to scrub before cleaning and then rinse with water.


■ Maintenance

1. This product should be used frequently to keep the motor dry.
2. If it is not used for a long time, please store this product in a dry and ventilated place to prevent the motor from getting damp.

Specification

Model	Voltage	Frequency	Heater power	Motor Power	Cold	Soup	Product Size	Product Weight
JD-D16	120V~	60Hz	800W	1200W	1750ml	1400ml	190x200x490MM	5.75KG

Schematic Circuit Diagram

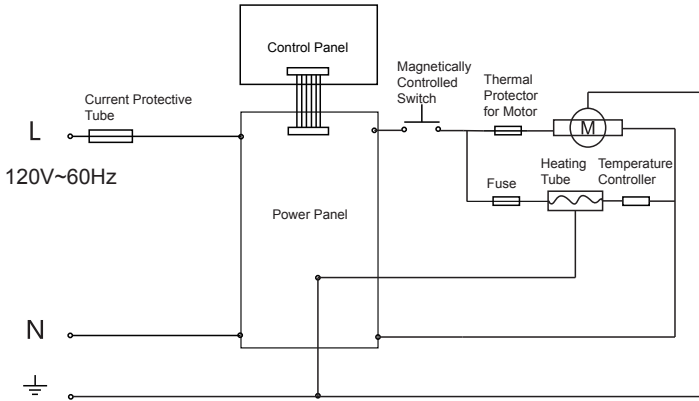

(Note: The wiring is subject to change without notice.)

Analysis and Disposal of Abnormal Circumstances

■ Disposal of Abnormal Circumstances

1. It is necessary to immediately power this product off and stop using if it is in abnormal circumstances such as abnormal noise, peculiar smell and smoke.
2. If this product fails to work, please check whether the power line is connected properly or not, whether its switch is turned on or not and whether the stirring cup is installed in place or not.
3. If this product still fails to work upon above check, please send it to any designated maintenance center for maintenance and consulting.

■ Failure Analysis and Troubleshooting

Failure	Possible Cause(s)	Solution
The power indicator light does not go on.	The power line is not inserted well.	Check the power line and ensure that it is inserted well.
The indicator light goes on but this product does not work.	Not press the " Start " button after selecting the target function.	Press the " Start/Stop " button after selecting the target function.
	The cup cover is not covered in place.	You will hear short sound of the buzzer after re-covering the cup cover well and installing it in place.
A button does not respond.	The system is not reset due to short power disconnection interval.	Power on and use this product after disconnecting its power supply for 3 minutes.
	This product has been executing the program.	It is a normal phenomenon.

Failure	Possible Cause(s)	Solution
The food cannot be smashed.	The added water is too much or less.	Please add water to the correct water level.
	The power voltage is too low.	You may use a household voltage stabilizer.
	The food material(s) is/are too much or less.	Please operate as per the recipe.
The food adheres to the bottom.	The interior of cup is not clean.	Use this product after cleaning the interior of its cup.
	The added food material(s) is/are too much.	Please operate as per the recipe.
	Press a wrong functional button.	Select a correct functional button.
E1	Over current protection.	Disconnect the power supply, unplug the plug, and let the machine cool down naturally for 15min; add too much ingredients or cut too big. Causes motor overload protection.
E2	Thermistor is short-circuited or open.	Disconnect the power supply, unplug the plug, and pay attention to the upper and lower connectors with good coupling, keep the surface of the coupler dry.
E3	Heating plate is broken.	Disconnect the power supply, unplug the plug, and pay attention to the upper and lower connectors with good coupling, keep the surface of the coupler dry.
E4	Zero crossing failure	Disconnect the power supply, unplug the plug, and pay attention to the upper and lower connectors with good coupling, keep the surface of the coupler dry and the lid Screwed in place, the anti-overflow ring is clean.
EA	Overflow prevention error	Disconnect the power supply, unplug the plug, and pay attention to the upper and lower connectors with good coupling, keep the surface of the coupler dry and the lid Screwed in place, the anti-overflow ring is clean.

After-sales service policy

PandaBrands Inc warrants this product to be free from defects in materials or craftsmanship for a period of One year following the date of purchase, provided that the product is used in a home environment. This limited warranty does not cover failure due to abusive operations, accidental damage or when repairs have been made or attempted by non professional. A defective product meeting the above warranty conditions set forth herein will be replaced or repaired at no charge if the product is purchased within 30 days. Beyond 30 days but within One year of original purchases, the product will be repaired or replaced free of charge and customer will be responsible for shipping charges. Beyond One Year of original purchase, customer will be responsible for parts, labor and shipping charges. This product is not intended for commercial use, and accordingly, such commercial usage will void this warranty. For more information, please contact the customer service at service@pandabrands.com.



更多厨电, 请扫一扫



更多食谱, 请扫一扫

Imported and distributed by: Pandabrand Inc.
Email: business@pandabrand.com
Customer service: service@pandabrand.com