 


Joydeem Intelligent Lifting Hot Pot User Manual

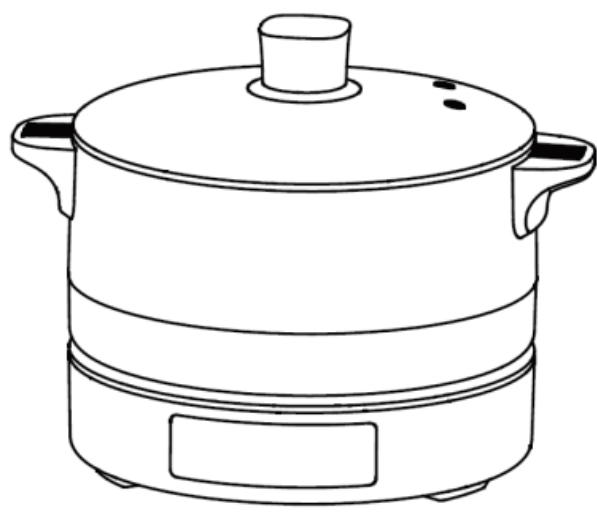 


扫一扫,发送:升降火锅
获取:使用教学视频
食谱视频
功能介绍视频
电子说明书

Thank you for choosing Joydeem Intelligent Lifting Hot Pot, please read this user manual carefully before using your product for first time.

First time using :


1.Install glass lid handle for the first time, the pot cover handle needs to be installed to the glass lid. (The installation method is shown in the figure)

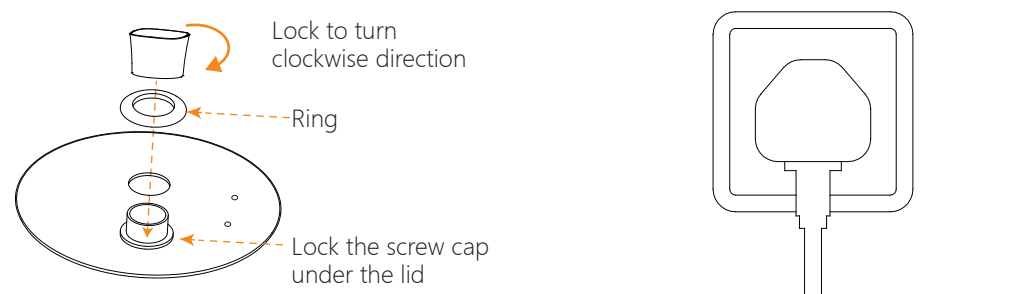

2.Plug in to power source The power indicator light will flashing needs to be installed to the glass lid. (The installation method is shown in the figure)

Preparation before use : Clean the ingredients first and cut them into pieces as needed. Then clean the pot body, basket and lid, add an appropriate amount of water or soup in the pot, put the pot body on the base and rotate it left and right to ensure good contact. Put the basket into the pot and cover it.

 User Guidance : 1. ON/OFF function Press the "ON / OFF" key once in standby or working mode to enter the shutdown state.indicator flashes. Press the "ON / OFF" key to enter the standby mode.

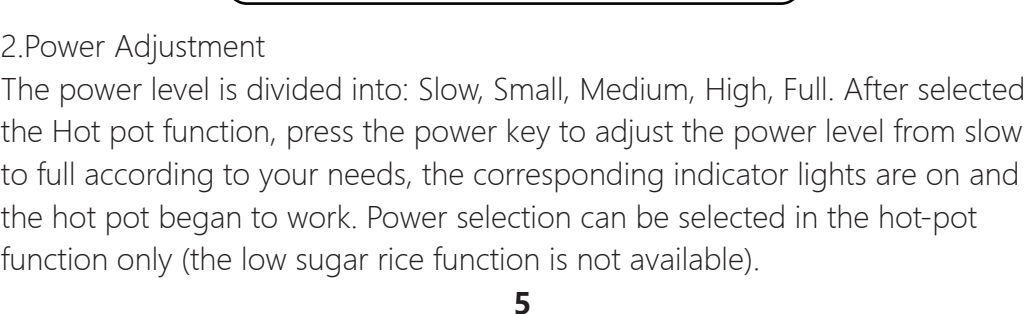

2.Power Adjustment The power level is divided into: Slow, Small, Medium, High, Full. After selected the Hot pot function, press the power key to adjust the power level from slow to the hot pot according to your needs, the corresponding indicator lights are on and the hot pot began to work. Power selection can be selected in the hot-pot function only (the low sugar rice function is not available).


Trouble Shooting :

Problem	Reason	Solution
No power (no heating indicator light)	1.The plug connection is not in place or the socket is damaged. 2. Product damage.	1. Plug it back in place or plug it into another socket that is confirmed to have power. 2. Please contact the after-sales customer service for handling.
No heating	1. Product dry burning protection. 2. The heating pipe of the pot body is damaged.	1. Please remove the sticky food from the bottom of the pot. After lowering the basket to the bottom, lift the pot again and put it in the pot to eliminate the bad contact 2. Please contact the official after-sales customer service for handling.
Hot pot / drained rice The function key flashes and does not work	The pot body is not placed properly, and the pot body is not detected	Lift the pot again and reposition it. If the indicator still flashes and does not work,please contact the after-sales customer service for treatment.
Continuous drip sound during heating	1. Whether the bottom of the pot is stuck. 2. Product damage	1. Please use a spatula to remove the sticky lake. 2. If you click the power again, or there is a continuous drip sound, please wait 1 minute and enter the hot pot mode again. If this is still the case, please contact the after-sales customer service for treatment.


使用操作步骤 :

使用前准备 先将食材清洗干净, 根据需要切块备用。 然后锅体、提篮等清洗干净, 在锅内加入适量的清水或汤料, 将锅体放在底座上并在右旋转一下, 以保证接触良好。将提篮放入锅内, 盖上锅盖。

 
1.开关机功能 连接电源后, "开/关"指示灯闪烁, 按一下"开/关"键, 进入待机状态。在待机或工作状态下一按"开/关"键, 进入关机状态。

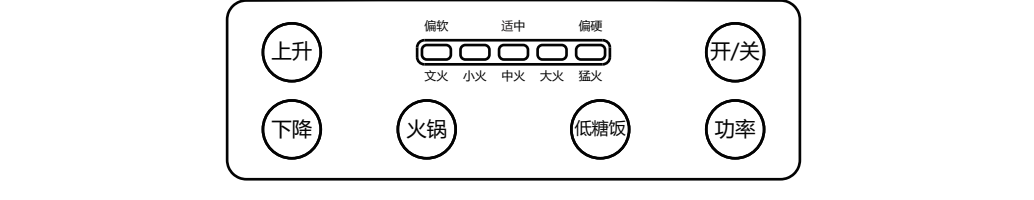

 2.功率调节 (火锅功能) 功率级别分为: 文火、小火、中火、大火、猛火。选择"火锅"功能后, 按"功率"键, 根据需要将功率大小从文火调整到猛火, 相应的指示灯亮起, 火锅开始进入工作状态。只能在火锅功能中进行功率调节 (低糖米饭功能不可用)。

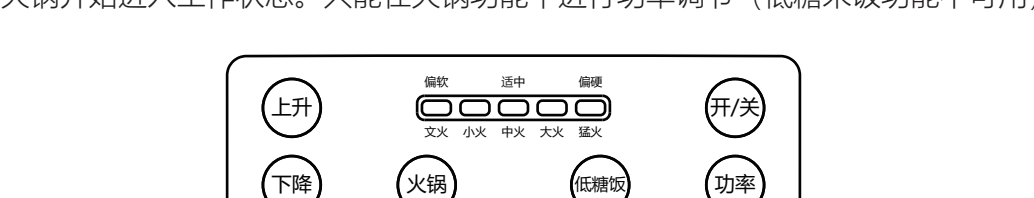

 3.上升菜单 (火锅功能) 在火锅功能下, 提篮可以根据您的需要升起。如果您需要升起提篮, 请按"上升"键, 提篮升起时其指示灯亮起。移动完成后, 指示灯熄灭。您也可以以通过再次按"上升"或"下降"键来设置移动距离, 以停止移动 (低糖饭模式不可用)。

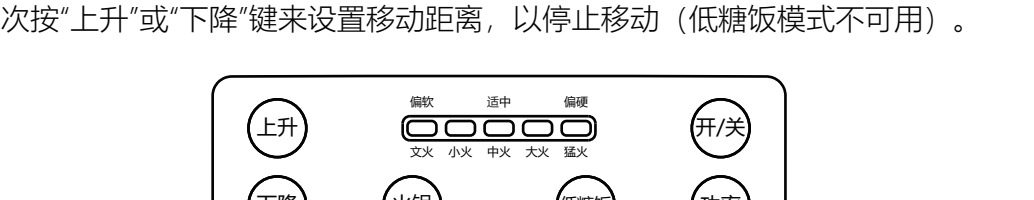


Safety Precautions :

- Please read the instructions and all the illustrations carefully before using this product. Keep this manual for future reference.
- Before plugging in the power supply, please check whether the voltage indicated on the product (on the bottom of the electric cooker and the base unit) matches the voltage in your home (AC120V~, 60Hz).
- Connect the product power cord to a grounded power outlet to ensure personal safety. If there is any damage to the power cord of this product, please contact our after sale service center and it must be replaced by our maintenance personnel.
- When using this product, it should be placed on a stable platform and placed out of reach of children.
- Do not use this product on or near the surface of not heat-resistant objects such as carpets and plastics. Do not place the items that are susceptible to steam on top of this product.
- When the product is used, a large amount of steam will be sprayed from the spout of the pot, please be careful of being scalded.
- Please keep the surface of the heating stain base of the machine clean. After every use, you must clean the dirt or water on the surface of the base.
- When cleaning the base and body of the cooker, do not immerse it in water or allow liquid to flow into the interior of the product or inside the base to avoid danger!
- If there is no water in the cooker, please do not dry-cooking , otherwise it will affect the service life of the product.
- This product has an dry boil protection function. When the temperature of the heating base is overheated, it will automatically power off.
- If you accidentally dry boiling without water during use, first unplug the power plug from the power socket, then let the unit cool for 15 minutes, then fill in cold water, the unit will automatically return to normal.
- The product must be taken care of while the boiling or cooking process. Do not allow children to approach the hot pot, and do not let the children pull the power cord or tap the hot pot.


1

User Guidance :

 1. Rise up the basket (Hot pot function) Under the Hot pot function, the basket can be rise up, according to your needs. If you need to rise up the basket, press "Up" key once, its indicator is ON while is rising Up. The indicator is OFF once the movement is completed. You may also set the travel distance by pressing "Up" or "Down" key again to stop the movement. (The low sugar rice mode is not available).

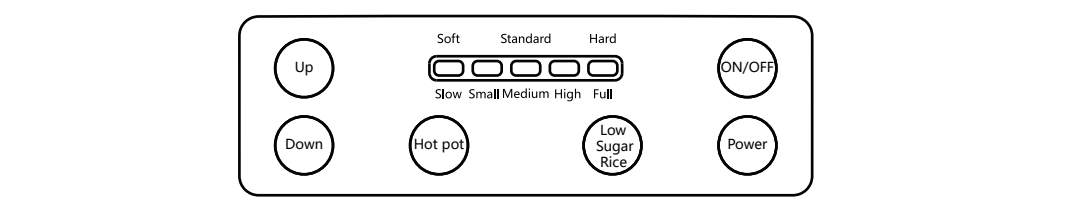

 2. Drop down (Hot pot function) Under the Hot pot function, the basket can be drop "Down", according to your needs. If you need to drop "Down" the basket, press "Down" key once, its indicator is ON while is dropping down. The indicator is OFF once the movement is completed. You may also set the travel distance by pressing "Down" or "Up" key again to stop the movement (the low sugar rice mode is not available).

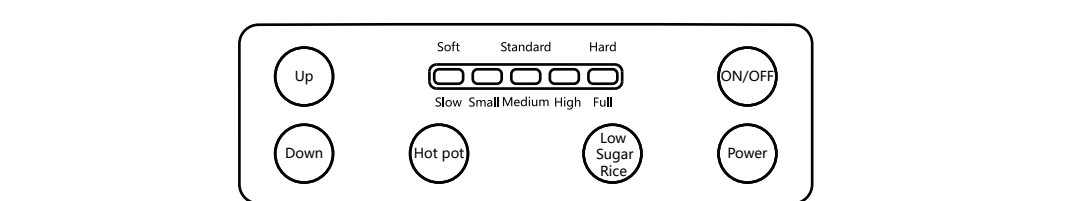

3. Hot pot function Firstly, add an appropriate amount of water or soup into the pot, and then put the basket into the pot. The maximum water level shall not exceed the maximum water level "Max" in the pot after adding food, and then cover

2

Food contact list : The contact materials between this product and food meet the requirements of gb4806.1-2016 series standards:


Food contact			
Part Name	Material	Executive standard	Remark
Lid handle	Polypropylene	GB4806.7-2016	PP
Glass lid	glass	GB4806.7-2016	/
Basket	Stainless steel 06Cr19Ni10	GB4806.9-2016	SUS304
Pot	Stainless steel 06Cr19Ni10	GB4806.9-2016	SUS304

Customer Service : PandaBrands Inc warranties this product to be free from defects in materials or craftsmanship for a period of One year following the date of purchase, provided that the product is used in a home environment. This limited warranty does not cover failure due to abusive operations, accidental damage or when repairs have been made or attempted by non-professional. A defective product meeting the above warranty conditions set forth herein will be replaced or repaired at no charge if the product is purchased within 30 days. Beyond 30 days but within One year of original purchases, the product will be repaired or replaced free of charge and customer will be responsible for shipping charges. Beyond One Year of original purchase, customer will be responsible for parts, labor and shipping charges. This product is not intended for commercial use, and accordingly, such commercial usage will void this warranty. For more information, please contact the customer service at service@pandabrands.com. Imported and distributed by: Pandabrands Inc. Email: business@pandabrands.com Customer service: service@pandabrands.com

10


使用操作步骤 :

 4. 下降菜单 (火锅功能) 在火锅功能下, 提篮可以根据您的需要下降。如果您需要放下提篮, 请按"下降"键, 当提篮放下时, 其指示灯亮起。移动完成后, 指示灯熄灭。您可以通过再次按下"上升"或"下降"键来设置移动距离, 以停止移动 (低糖饭模式不可用)。

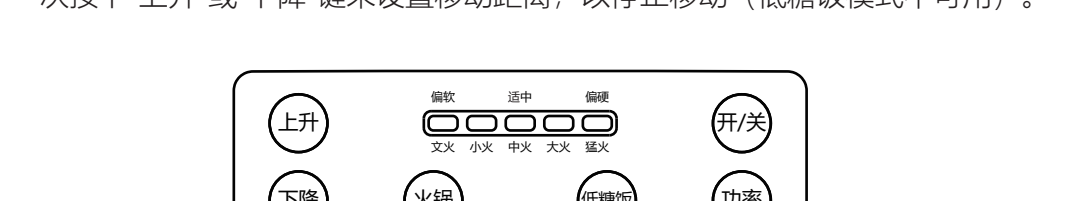

5. 火锅功能 首先将适量的水或汤放入锅内, 然后将提篮放入锅内, 最高水位以加入食物后不得超过锅内的最高水位线"MAX", 然后盖上锅盖。不要将食材或配料放在提篮下面, 容易导致锅底粘糊。先把篮子放好, 然后把食材或配料放在篮子里, 按"开/关"键进入待机状态。按"火锅"键选择火锅模式, 火锅灯亮, 火锅默认猛火加热。您可以根据需要按"功率"键调整功率大小 (文火、小火、中火、大火、猛火五档功率循环选择), 对应火力指示灯将亮起。火锅模式下按下"上升"键, 将提篮抬到顶部, 即可依次将食物放入提篮, 按下"下降"键, 提篮下降对应LED灯亮起。如果在"猛火"加热模式下按下"上升"键升起提篮添加食物时, 机器将自动切换到中火模式。添加食物后, 按下"下降"键降下提篮, 机器将返回到"猛火"功率加热模式。此设置是为了防止锅中的水或汤沸腾, 避免烫伤。待食物煮熟后, 再次按下"上升"键将提篮升至顶部, 就可取用食物了。

 温馨提醒: (1) 如果用户未盖上锅盖, 则锅内的最小水量不得超过过篮子的一半, 以避免沸水溢出造成烫伤。 (2) 用酱油或深色锅类调味时, 使用后应立即清洗, 否则锅体会沾上酱油色。

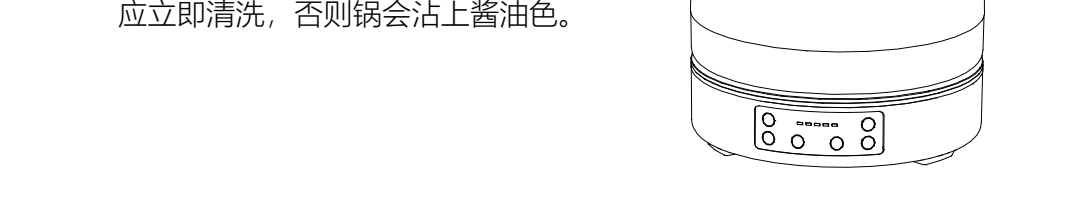

15

Safety Precautions :

- Please do not immerse the power cord, plug, and the whole machine or base in water or other liquids to prevent damage to the product and electric shock.
- If the machine, base or other parts are damaged, please stop using it immediately. Please contact our after-sales service department for repair.
- Please place the product on the platform or on the table to make sure that the cooker and base are not tipped over and that water does not spill into the base unit.
- When adding water to the pot, do not exceed the maximum water mark line inside the pot. When the water volume exceeds Max Level, the water will overflow after the boiling water boils.
- During the work process, please do not touch the Metal parts by hand to avoid being burnt.
- When using this product, make sure that the power outlet is in good contact. Do not operate the product with an extension cord.
- When pulling the power cord plug, hold the plug part. Do not forcibly pull the power cord. Otherwise, it may cause electric shock or short circuit.
- Do not connect or pull the power cord with wet hands, otherwise it may cause a short circuit or electric shock.
- Except professional maintenance technicians, please do not disassemble, repair or modify the machine yourself, otherwise it may cause fire and electric leakage.
- When the water is boiling, do not move the hot pot.
- This product is for indoor use and household only and should not be placed outdoor. Do not use this product for non-designated purposes.
- For people with physical, sensory or intellectual disabilities and lack of experience and knowledge, their use of the appliance requires supervision or guidance and an understanding of the hazards involved.
- Adults should instruct children not to play this appliance.
- Regularly check the power cord of this product. If the power cord is damaged, it must be replaced by our after-sales service department or qualified electrician to avoid danger.

2

User Guidance : the pot. Do not put the ingredients under the basket, which is easy to cause the bottom of the pot to stick. Put the basket firstly, and then put the ingredients in the basket. Press the "ON / OFF" key to enter the standby mode, press the "Hot pot" key to select the hot pot mode, the hot pot light will be on, and the hot pot is heated by Full mode by default. You can press the "Power" key to adjust the power according to your needs (Slow, Small, Medium, High, Full), and the corresponding power indicator will light up. Press "Up" in the hot pot mode Key, lift the basket to the top, and then put the food into the basket in turn. Press the "Down" key, and the corresponding LED lights up. If you press the "Up" key to raise the basket in the "Full" heating mode, when adding food, the machine will automatically switch to the Medium mode. After adding food, press the "Down" key to lower the basket, and the machine will return to the "Full" Power heating mode. This setting is to prevent the water or soup in the pot from boiling and avoid scalding. After the food is cooked, press the "Up" button again to lift the basket to the top, and the food can be used.

Warm tips: (1). If user do not cover the pot lid, the minimum water quantity in the pot shall not exceed half of the basket, so as to avoid scalding caused by boiling water splashing. (2). When cooking food with soy sauce or dark color in the pot, clean it immediately after use, otherwise the pot will be stained with soy sauce color.

6.Low sugar rice function Firstly, pour about 1.6L of clean water into the pot to the "Min" minimum water level, put the basket in the pot and the rice (no more than 320g rice at most) evenly in the basket, cover the glass lid and plug in the power plug. Press the "ON/OFF" key to enter the standby mode. Press the "Low sugar rice" key to select the "Low sugar rice" mode. The function defaults to the

3

 
安全注意事项 :

- 使用本产品前, 请仔细阅读说明书和所有插图。请保留本手册以备将来参考。
- 在插入电源之前, 请检查产品 (电火锅底部和底座上) 上显示的电压是否与您家中的电压 (AC120V~, 60Hz) 匹配。
- 将产品电源线连接至接地电源插座, 以确保人身安全。如果本产品的电源线有任何损坏, 请联系我们的售后服务中心, 必须由我们的维修人员更换。
- 使用本产品时, 应将其放置在稳定的平台上, 并放置在儿童接触不到的地方。请勿在地毯和塑料等不耐热物体表面或附近使用本产品。请勿将易受蒸汽影响的物品放在本产品顶部。
- 使用本产品时, 蒸汽孔会喷出大量蒸汽, 请小心烫伤。
- 请保持机器加热底座表面清洁。每次使用后, 必须清洁底座表面的污垢或水。
- 清洁机器底座和锅体时, 不要将其浸入水中, 也不要让液体流入产品内部或底座内部, 以免发生危险!
- 如果锅体内没有水, 请不要干烧, 否则会影响产品的使用寿命。
- 本产品具有干烧保护功能。加热底座温度过热时, 自动断电。
- 如果在使用过程中意外无水干烧, 请先拔下电源插座上的电源插头, 然后让本机冷却15分钟, 然后注入冷水, 机器将自动恢复正常。
- 在煮沸或烹饪过程中, 须时刻关注产品。请不要让儿童靠近火锅, 也不要让儿童拉电源线或敲击电火锅。
- 请勿将电源线、插头、整机或底座浸入水或其他液体中, 以免损坏产品和触电。
- 如果机器、底座或其他部件损坏, 请立即停止使用, 请联系我们的售后服务中心进行维修。
- 将产品放在平台上或桌子上, 以确保锅体和底座不会倾斜, 水不会落入底座。
- 向锅内加水时, 不要超过锅内的最大水位线。当水量超过最高水位时, 沸腾后会溢出, 引起危险。
- 在工作过程中, 请不要用手触摸金属部件, 以免烫伤。
- 使用本产品时, 请确保电源插座接触良好。请勿使用延长线操作产品。
- 拔下电源线插头时, 握住插头部分, 不要用力拉电源线。否则, 可能导致触电或短路。
- 请勿用湿手连接和拔出电源线, 否则可能导致短路或触电。
- 除非专业维修技术人员外, 请勿自行拆卸、修理或改装本机, 否则可能引起火灾和漏电。

12

使用操作步骤 :

6. 低糖饭功能 先将约1.6L清水倒入锅内至"MIN"最低水位线, 将篮子放于锅内, 将淘洗干净的米 (最多不超过320g大米) 均匀平铺在提篮里, 盖上锅盖, 插入电源插头。按"开关"键进入待机模式, 按一下"低糖饭"键选择"低糖饭"模式, 功能默认为口感为"偏硬", 您可以根据自己的需要按"低糖饭"键选择"偏硬", "适中", "偏软"三种口感。对应LED灯亮起。设定后机器开始工作, 烹饪时提篮会根据程序设定自动上下升降, 无需人为操作。煮饭完成后蜂鸣器发出长声, 进入保温状态, 所选口感对应的LED灯闪, 温度保持在80°C左右, 保温1小时后返回待机状态。注意: 在"低糖饭"模式下, 您不能通过按"上升"和"下降"键来调整提篮。

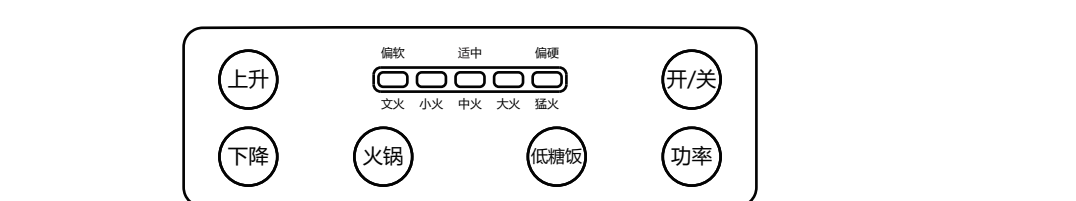

用户指南 :

口感	烹饪方法	时间参考
偏软	向锅内加入约1.6L的水至"MIN"最低水位线位置, 放入提篮后水位不超过提篮边缘, 将米均匀铺平在提篮内 (最大米量不超过320g)。	约30分钟
适中		约26分钟
偏硬		约22分钟

• 以上蒸煮时间通过加热元件智能加热控制, 实际水量和大气压力、蒸汽时间可供参考。 • 不同品牌的大米, 煮熟的米饭会有不同的烹调效果。

7. 蒸煮食物功能 先在锅内加入约1L水, 然后将提篮放入锅中, 选择"火锅"模式, 然后按"上升"键将提篮升起至顶部, 将需要煮的食物放入提篮内, 盖上锅盖, 控制好加热时间即可。

 
17

Safety Precautions :

- When the water is boiled several times, white water stains will adhere to the stainless steel heating plate. This is a normal phenomenon, which is caused by impurities in the water, we suggest that you use Lemon Acid to remove the stains after use.
- When cooking food, the amount of water and food should not exceed Max Line to prevent the water from boiling out. If the water is sprayed out, immediately turn off.
- Do not place the appliance near a heat source such as a water heater, electric stove or microwave oven.
- When using the appliance, make sure that there is at least 10 cm of space on each side of the main unit to allow air to circulate.
- When not using the appliance or cleaning, please unplug the power cord first, and then cool down before disassembling the accessories.
- When using the product, the surface temperature of the product is very high. Do not touch the lid and Metal parts to prevent burns. When uncovering the lid, be careful to avoid the steam hole and prevent burns.
- When steaming food: First pour in about 1L of water then put the basket into the pot, press the "Hot Pot" mode, and then press the rising key, lift the top of the glass cover, please control the time within 10- 15 minutes , user must not leave it unattended while in use. Prevent not to dry-burning the cooker.
- Before cleaning this product, if there is a basket in the pot, please take out the basket now, please unplug the power plug first and clean it after the machine cools down.
- This product cannot be used for deep-fry cooking.
- Do not cook large size of food or glass and plastic utensils in the pot so as to avoid danger.
- Do not store any flammable articles (such as towels, paper, etc.) in the pot, as they are easy to cause fire when used. Flammable articles (such as curtain, paper, etc.) should not be placed around them, which can easily lead to fire.

3

User Guidance : taste of "Hard". You can press the "Low sugar rice" key to select "Hard", "Standard" and "Soft" according to your needs. After setting, the machine starts to work. During cooking, the basket will rise and fall automatically according to the program setting without manual operation. After cooking, the buzzer will make a long sound and enter the keep warm state. The LED corresponding to the selected taste flashes, the temperature is maintained at about 80 °C, and return to the standby state after heat preservation for 1 hour.

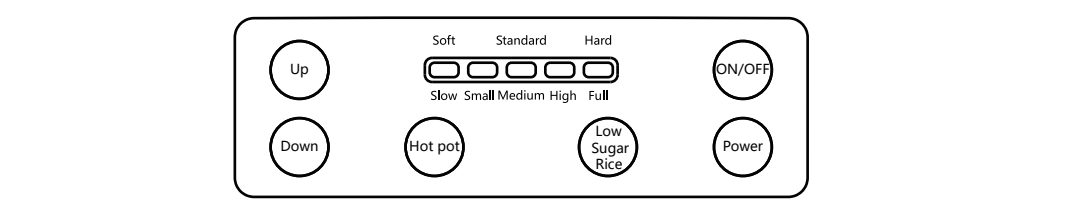

User Guidance

Menu	Cooking method	Cooking time
Soft	Add about 1.6L of water to the pot body to the "Min" lowest water level. After putting the basket, the water level shall not exceed the edge of the basket, and the meter shall be evenly paved in the basket (the maximum meter shall not exceed 320G).	Around 30 minutes
Standard		Around 26 minutes
Hard		Around 22 minutes

• the above cooking time is controlled by intelligent heating of heating elements. The actual water volume, atmospheric pressure and cooking time can be used for reference. • cooked rice of different brands will have different cooking effects.



8

安全注意事项 :

22. 水开时, 不要移动火锅。
23. 本产品仅供室内使用和家用, 不应放置在室外。请勿将本产品用于非指定用途。
24. 对于身体、感官或智力残疾且缺乏经验和知识的人, 他们使用该设备需要监督或指导, 并了解所涉及的危险。
25. 成人应指导儿童不要玩此设备。
26. 定期检查本产品的电源线。如果电源线损坏, 必须由我们的售后部门合格电工更换, 以避免危险。
27. 当水煮沸几次时, 白色的水垢会粘附在不锈钢锅内, 这是一种正常现象, 是由于水中的杂质造成的, 建议使用后用柠檬酸或除垢剂去除污渍。
28. 烹饪食物时, 水和食物的量不应超过最大水位线, 以防止水沸腾。如果水溢出, 请立即关闭电源。
29. 请勿将机器放置在热源附近, 如热水器、电炉或微波炉。
30. 使用本产品时, 确保主机两侧至少有10厘米的空间, 以便空气流通。
31. 当不使用本产品或不清洁时, 请先拔下电源线, 冷却后再拆卸附件。
32. 使用时, 产品的表面温度非常高, 请勿触摸盖子和金属部件, 以防烫伤。打开盖子时, 小心避开蒸汽孔并防止泄漏。
33. 使用时不得无人看管, 以防止火锅干烧。
34. 清洗本产品前, 如果锅内有提篮, 请取出提篮, 请先拔下电源插头, 待机器冷却后再清洗。
35. 本产品不能用于油炸烹饪。
36. 不要在锅中煮大尺寸的食物或玻璃和塑料制品, 以避免危险。
37. 不要将任何易燃物品 (如毛巾、纸等) 存放在锅中, 因为它们在使用时容易引起火灾。易燃物品 (如窗帘、纸等) 不应放在周围, 这很容易导致火灾。
38. 请勿使用本产品未附带的附件, 以免造成危险和伤害。
39. 烹饪时不要用手触摸玻璃盖、蒸汽孔出口位置和玻璃表面, 以免烫伤。
40. 本产品有"警告"标志, 使用前请注意合规性。
41. 接通电源后, 不要使用任何金属接触耦合器。
42. 提篮升起时, 不允许提起火锅锅体。
43. 烹饪时不允许提起火锅锅体。

13

清洁和维护 :

- 每次使用后请及时将机器清洗干净。清洁前请先拔下电源插头, 让机器冷却。在煮沸和烹饪过程中, 火锅锅体可能会残留污垢和水渍, 这是正常现象, 可以用洗洁精清洗或定期用柠檬酸、除垢剂清洗锅体内的水渍。
- 清洁产品时, 严禁将产品底座和锅体底部浸入水中清洗或在龙头下冲洗, 不能让液体流入锅体底部或底座内部, 以免发生危险!
- 清洁完成后置于通风干燥处保存。
- 白醋清洗水垢的方法: a) 将食醋与水按1:2的比例混合, 倒入锅中 (最高水位线), 开始煮沸, 煮沸后等待冷却, 关闭电源, 返回待机状态。 b) 将混合物放在锅中约30-60分钟。 c) 把混合物倒出来。 d) 将干净的水倒入至最高水位线, 重新启动火锅模式进行煮沸。 e) 把煮沸的水倒出, 用毛巾清洁锅体和表面, 并完成清洁程序。
5. 也可选用柠檬酸或除垢剂去除水垢污渍。

故障问题及解决方案 :


故障现象	故障原因	解决方案
不通电 (不加热指示灯也不亮)	1. 插头接触不到位或插座损坏。 2. 产品损坏。	1. 重新插到位置或另插于确认有电的插座。 2. 请联系官方售后服务处理。
不加热	1. 产品干烧保护。 2. 锅体发热管损坏。	1. 请清除一下锅底粘锅的食物, 把提篮下降到底部后重新提锅放锅, 排除接触不良现象。 2. 请联系官方售后服务处理。
火锅/低糖饭功能不工作	锅体未放置好, 未检测到锅体。	重新提起锅体并重新放置锅体, 如果指示灯依旧闪烁不工作, 请联系官方售后服务处理。
加热过程中出现连续滴滴声	1. 锅底是否有糖垢粘住。 2. 产品损坏。	1. 请使用铲刀清除糖垢即可。 2. 如再次点按电源, 还是连续出现滴滴声, 请稍等1分钟再次进入火锅模式, 如依旧是此类情况, 请联系官方售后服务处理。

18

Safety Precautions :

38. Do not use accessories not supplied with this cooker to avoid danger and cause injury.
39. Do not touch the glass lid and steam hole outlet position and glass surface by hand during cooking to avoid scalding.
40. The product with a "warning" sign, please pay attention to compliance before use.
41. After connect the power, do not use any metal to touch the coupler (electrified in below image)
42. It is not allowed to lift the pot when the basket is rising up.
43. It is not allowed to lift the pot when cooking.

 General Structure :

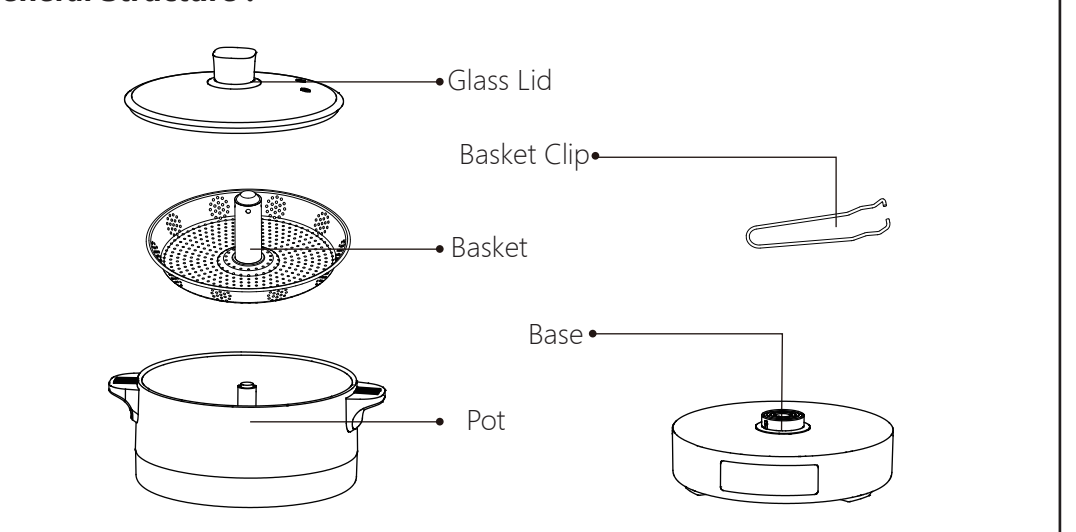

Product Specifications :


Model	Voltage	Rated Power frequency	Power	Product Size	Product Weight
JD-DHG4A	120V~	60Hz	1500W	33.5*26.9*26cm	3.3KG

*The final product specification may be varied according to a different lot of material and actual input voltage power of the usage area.

4


Cleaning and Maintenance

 1. Please clean the machine in time after each use. Please unplug the power plug before cleaning to let the machine cool down. During boiling and cooking, dirt and water stains may remain on the hot pot body, which is a normal phenomenon. You can clean the water stains in the pot body with detergent or regularly clean the water stains in the pot body with citric acid and descaling agent.
2. When cleaning the product, it is strictly prohibited to immerse the product base and the bottom of the pot into water for cleaning or rinse under the tap. The liquid cannot flow into the bottom of the pot or the inside of the base to avoid danger!
3. Store in a ventilated and dry place after cleaning.
4. Method for cleaning scale with white vinegar: a) Mix vinegar and water in the ratio of 1:2, pour it into the pot (the highest water level), start boiling, wait for cooling after boiling, turn off the power and return to standby mode. b) Place the mixture in the pot for about 30-60 minutes. c) Pour out the mixture. d) Pour clean water to the highest water level, restart the hot pot mode and boil. e) Pour out the boiled water, clean the pan and surface with a towel, and complete the cleaning procedure.
5. Citric acid or scale remover can also be used to remove scale stains.



9

 产品结构 :

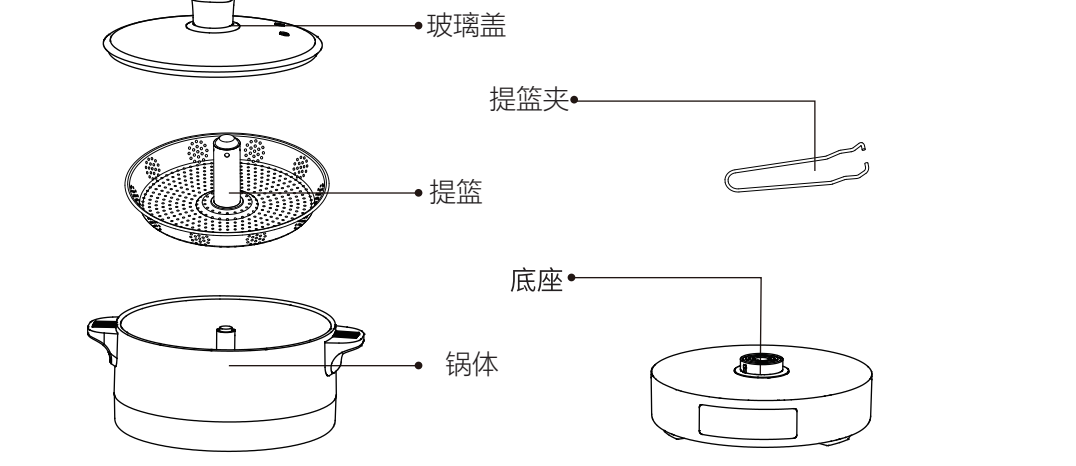


产品参数 :

型号	电压	频率	功率	产品尺寸	产品重量
JD-DHG4A	120V~	60Hz	1500W	33.5*26.9*26cm	3.3KG

*根据不同批次的材料和使用区域的实际输入电压功率, 最终产品规格可能会有所不同。

首次使用

 1. 安装玻璃盖把手 首次需要将提篮把手安装到玻璃盖面上。 (安装方法如图所示)
2. 插入电源 开关指示灯将闪烁

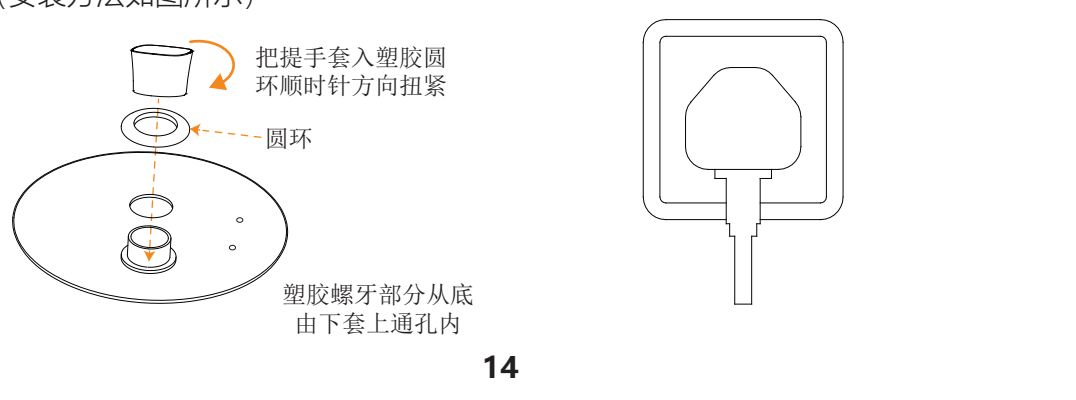

食品接触清单 :

本产品与食品接触材料均符合GB4806.1-2016系列标准的要求:

食品接触			
部件名称	材质	执行标准	备注
锅盖把手	聚丙烯	GB4806.7-2016	PP
玻璃盖	玻璃	GB4806.7-2016	/
提篮	不锈钢06Cr19Ni10	GB4806.9-2016	SUS304
锅胆	不锈钢06Cr19Ni10	GB4806.9-2016	SUS304

售后服务政策

PandaBrands Inc保证本产品自购买之日起一年内无材料或工艺缺陷, 前提是产品在家庭环境中使用。本产品有限保修不包括由于不当操作、意外损坏或非专业人员进行或试图进行维修而导致的故障。如果产品在30天内购买, 符合上述保修条件的缺陷产品将免费更换或维修。超过30天但在最初购买后一年内, 产品可免费维修或更换, 客户将负责运费。购买一年后, 客户将承担零件、人工和运输费用。本产品不用于商业用途, 因此, 此类商业用途将使其保修失效。欲了解更多信息, 请联系客户服务部! service@pandabrands.com

Imported and distributed by: Pandabrands Inc. Email: business@pandabrands.com Customer service: service@pandabrands.com

19