 


# Joydeem

Food Processor 食物处理器 (套娃绞肉机)

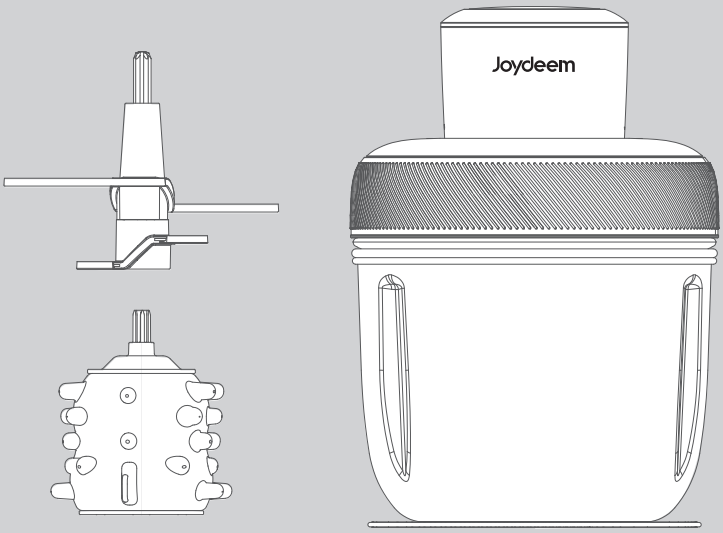

JD-376B

在使用本产品之前请仔细阅读使用说明书并保存好，以备日后参考

## 安全注意事项

请在使用本产品前仔细阅读本手册。为避免不当使用器具，而导致人身伤害，请务必严格遵守该操作说明。

1. 检查你所用的电压是否与产品的额定电压相符。
2. 刀片停止旋转后方可打开碗盖。
3. 刀组件非常锋利，在取下保护套及清洁维护时请小心，预防割伤。
4. 当拔下插头时，请抓住插头拔出电源线，不要拉扯电线。
5. 产品配置的主机不可挪作他用。
6. 清洁产品前，请确保拔出电源插头；待恢复常温后，方可拆卸或清洁部件。
7. 确保电源线不被悬挂在桌子或柜台的边缘、或接触高温部件表面。
8. 不可放置于或靠近燃气灶、电磁炉、热烤箱等。
9. 搅碎食物过程中，手或餐具不可接触刀片，以免发生安全风险，造成人身伤害或损坏产品。
10. 切勿把电源线、插头、主机浸湿于水或其他液体，以免发生火灾、漏电或人身伤害等风险。
11. 如由儿童操作/靠近使用本产品，须有家长陪同指导、监督。
12. 应照看好儿童，确保他们不玩耍本器具。
13. 避免与活动部件接触。
14. 使用非原厂推荐或销售之配件，可能会引起火灾、漏电或人身伤害等风险。
15. 如果电源软线损坏，为了避免危险，必须由制造商、其维修部或类似部门的专业人员更换。
16. 器具不打算由存在肢体、感官或精神能力缺陷或缺少使用经验和知识的人(包括儿童)使用，除非有负责他们安全的人对他们进行与器具使用有关的监督或指导。
17. 在没有监管的情况下，清洗以及维护器具的工作不应该由小孩来做。
18. 本设备须按说明书要求使用，不可挪作他用，不可在户外使用本产品。
19. 使用前，请确保主机固定牢固。
20. 切勿试图屏蔽碗盖的安全联锁装置。
21. 器具不得浸入水中。
22. 请保存好本说明书。

### 警告：

此产品仅限家庭使用！

为了避免伤害危险，在刀组件停止转动前，请勿取下主机，打开碗盖！食物处理完成后应先取出刀组件，后处理食物；切忌刀组件未取出前用手处理食物！

## 警告

1. 食物切碎后，先等待刀片停止转动，再拔掉插头，取出主机，碗盖，再取出刀组件，后处理切碎的食物，然后再清洗，切记刀组件没取出来之前，切记不能用手去处理食物。（见图1）
2. 此器具使用可复位温控装置，器具长时间运转时，主机温度升高，超过温度保险装置上限时，器具自动停止工作，待温度自然下降到设定的温度值时，拔掉插头重新插上可继续工作。当器具停止工作时，请拨下插头，避免误操作带来的危险。
3. 刀片停止旋转前，请勿打开碗盖。
4. 取刀护套时，切记手不要碰到刀刃，因为它非常锋利。
5. 清洁刀组件时，需要用清洁布擦拭，手不能去触碰刀片，因为它非常锋利。（见图1）
6. 工作完成后，请不要将刀组件翻倒插在主机上，主机请用清洁布擦拭，严禁冲水。（见图2）
7. 使用完成后，刀组件需套上刀保护套，放到碗内，以避免伤手。（见图3）


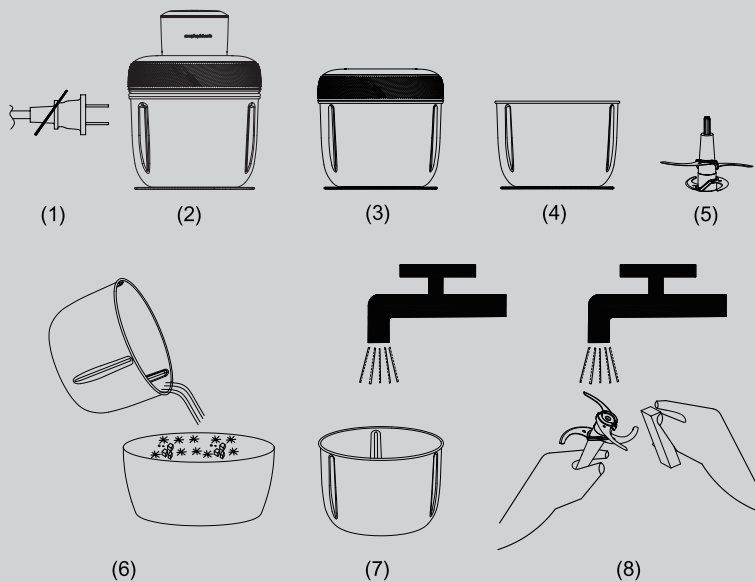 



图1

 

(1)

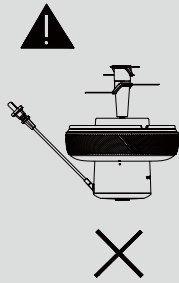

 
(2)

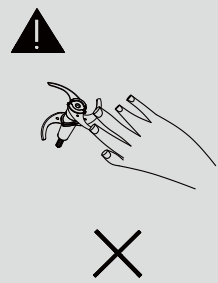


(3)



 (4)

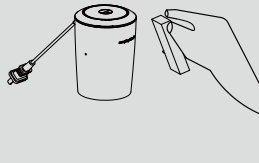


 (5)

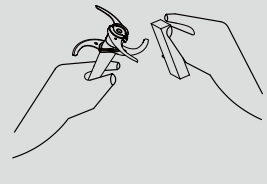


(6)

 
图2



 (1)



 (2)

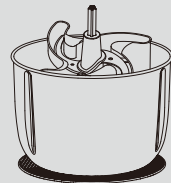


(3)

图3


注意：刀片停止旋转前，请勿打开碗盖；器具只限日常家庭使用。

## 产品图示

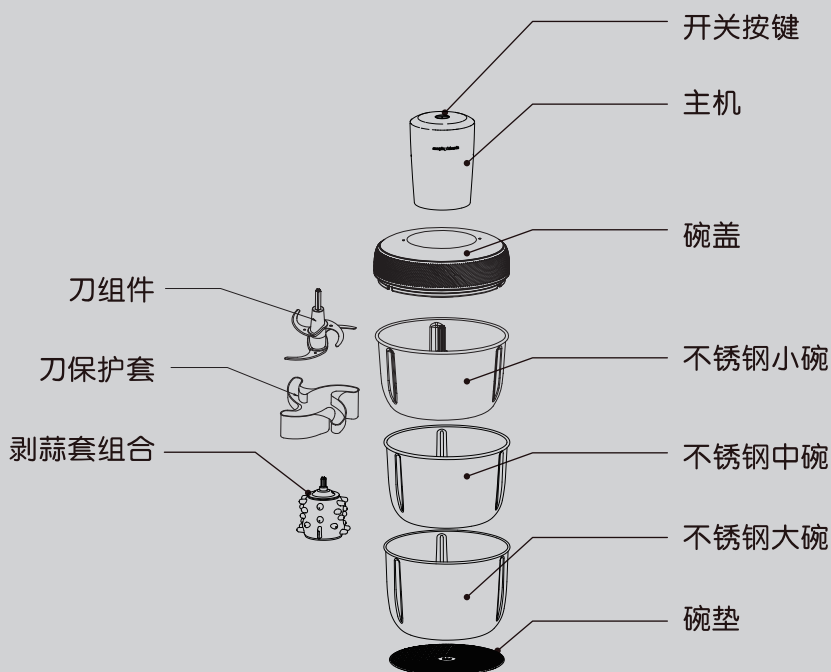 

型号	JD-376B
规格	120V~60Hz 300W
容量	800ml、1200ml、1500ml

## 电气原理图

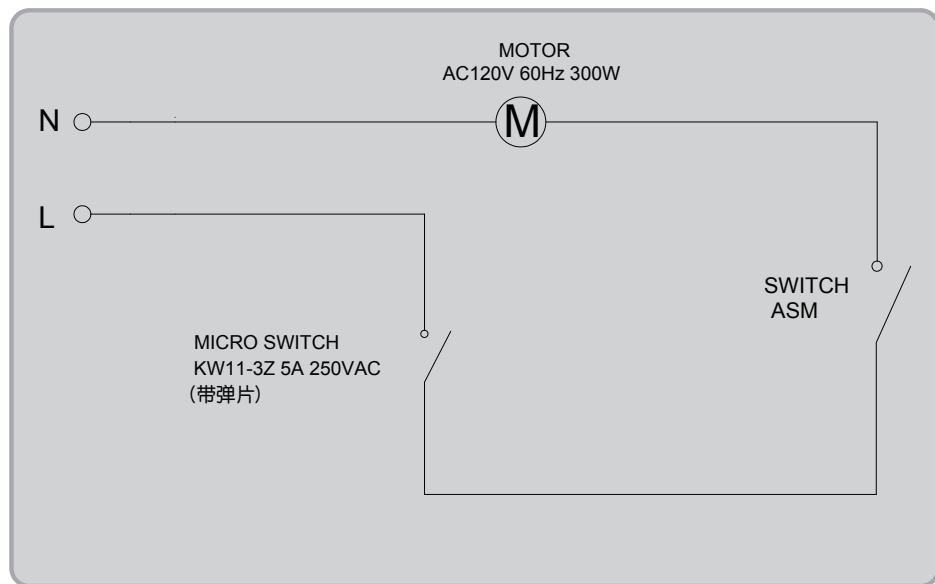 

## 初次使用

1. 第一次使用本产品前，请用皂液清洁不锈钢小碗，中碗，大碗和刀组件，并彻底干燥；不锈钢小碗，中碗，大碗可适用洗碗机进行清洁；主机使用湿布擦拭，不可浸泡于水里；刀组件可冲洗。（见图5）
2. 清洁好机器后，先将刀组件放到碗内，再加需要的食材到碗内，盖上碗盖，插上插头电源，最后用手将开关按键往下压，这样就可以切碎食材了。

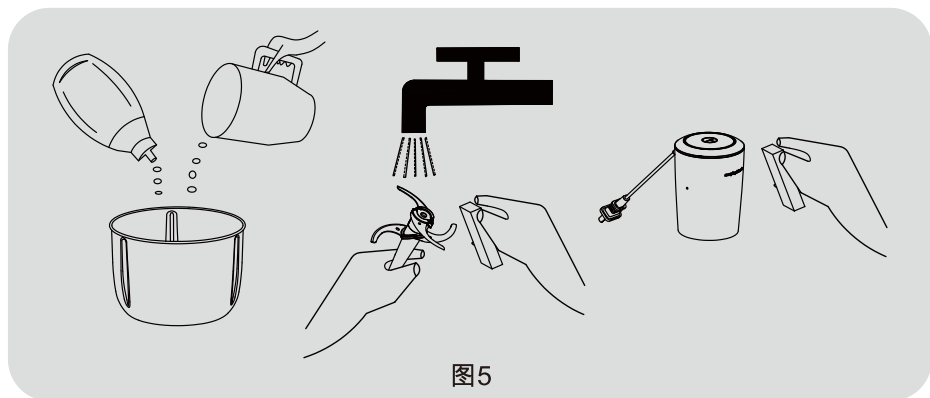 


图5

## 如何切碎食物

### 一、不锈钢小碗（见图6）

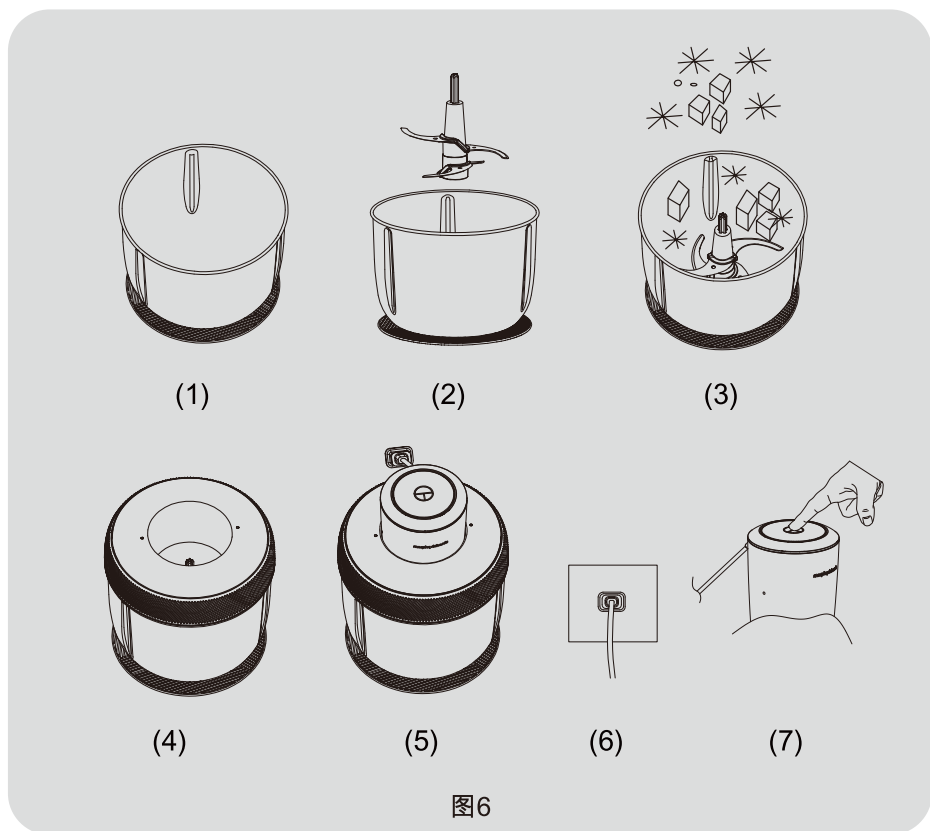 


图6

1. 把不锈钢小碗放置于绞肉杯垫上，然后把刀组件安装到不锈钢小碗底部的主轴上。

**注意：请勿触碰到刀刃部分，因为其非常锋利。**

2. 把熟食物放进不锈钢小碗，请参考切碎指引以获得理想的食物状态。熟食物需冷却。

3. 盖上碗盖，然后把主机放置于碗盖相应位置上，参照主机和碗盖上的对位圆点进行对位调整，直至主机与碗盖圆点标识对齐。

4. 按压开关按键并持续保持，产品开始工作，对碗内食物进行切碎处理。（见图6）

**注意：本产品设有一个脉冲按键，请避免直接连续运行电机超过30秒。越长时间连续运转，食物质地越细，对于粗质食物，请使用短时间工作。**

5. 请确保刀片完全停止旋转，方可打开碗盖。拔掉电源插头，拿起主机，然后抓住刀组件的塑料支架部分，提起刀组件。拿起不锈钢碗把里面的食物倒出。请不要把此不锈钢碗用作食物储存使用。

6. 开始使用时，请确保碗盖三个槽与碗口内的限位对上，对不上请不要强行盖上碗盖，使用完机器后收纳时，三个不锈钢碗需要按小到大套在一起，请不要强行将大不锈钢碗套进小不锈钢碗中。（见图7）

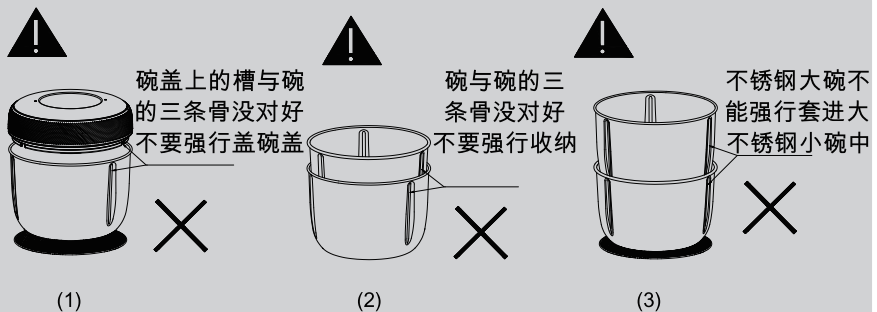 


图7





## 二、不锈钢中碗（见图8）

  1. 把不锈钢中碗放置于绞肉杯垫上，然后把刀组件安装到不锈钢中碗底部的主轴上；

**注意：请勿触碰到刀刃部分，因为其非常锋利。**

2. 把生肉类食物放进不锈钢中碗，请参考切碎指引以获得理想的食物状态。

3. 盖上碗盖，然后把主机放置于碗盖相应位置上，参照主机和碗盖上的对位圆点进行对位调整，直至主机与碗盖圆点标识对齐。

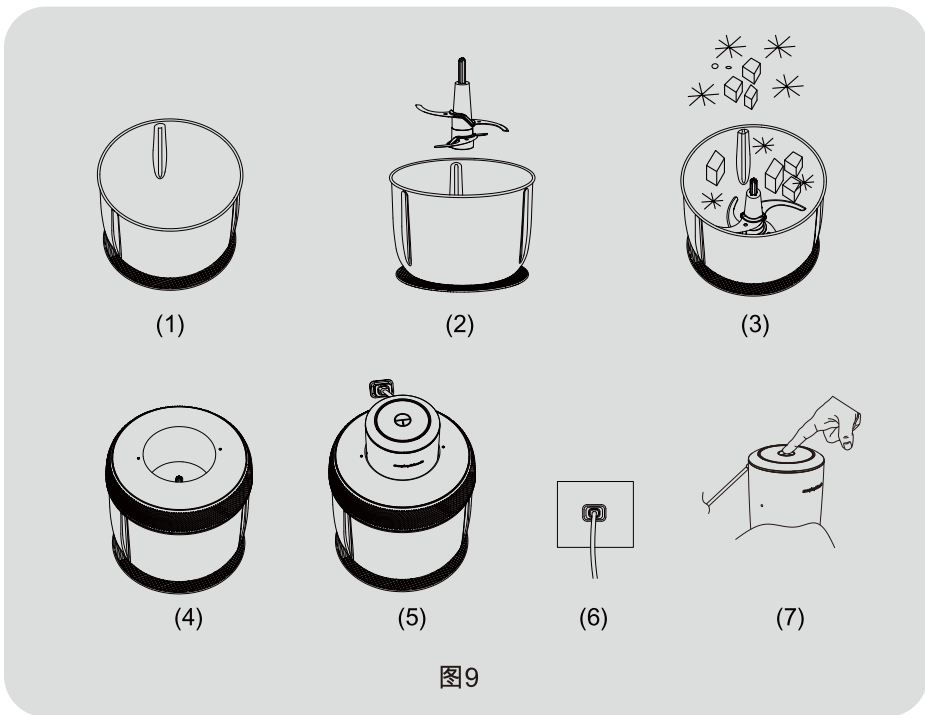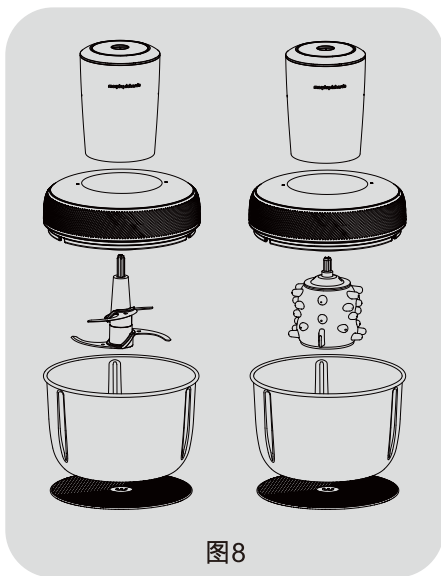

4. 按压开关按键并持续保持，产品开始工作，对碗内食物进行切碎处理。（见图9）

**注意：**本产品设有一个脉冲按键，**请避免直接连续运行电机超过30秒。越长时间连续运转，食物质地越细，对于粗质食物，请使用短时间工作。**

5. 请确保刀片完全停止旋转，方可打开碗盖。拔掉电源插头，拿起主机，然后抓住刀组件的塑料支架部分，提起刀组件。拿起不锈钢碗把里面的食物倒出。请不要把此不锈钢碗用作食物储存使用。（使用方法见图1）

## 剥蒜

1. 把不锈钢中碗放置于绞肉杯垫上，然后把剥蒜棒安装到不锈钢中碗底部的主轴上；把2-4个蒜切除根部后掰成蒜瓣状后放入碗内。

2. 盖上碗盖，然后把主机放置于碗盖相应位置上，参照主机和碗盖上的对位圆点进行对位调整，直至主机与碗盖圆点标识对齐。

3. 按压开关按键并持续保持，产品开始工作，对碗内大蒜进行剥皮处理，剥蒜时间约为20-60秒。

**请确保剥蒜棒完全停止旋转，方可打开碗盖。拔掉电源插头，拿起主机，然后抓住剥蒜棒的塑料支架部分，提起剥蒜棒，把里面的食物倒出，请不要把不锈钢碗用作食物储存使用。**

4. 使用时，请确保碗盖三个槽与碗口内的限位对上，对不上请不要强行盖上碗盖，使用完机器后收纳时，三个不锈钢碗需要按小到套装在一起，请不要强行将大不锈钢碗套到小不锈钢碗中去。

（见图7）

**注意：**剥蒜套组合只能在不锈钢中碗中使用，不锈钢小碗，大碗不能使用！

### 三、不锈钢大碗（见图10）

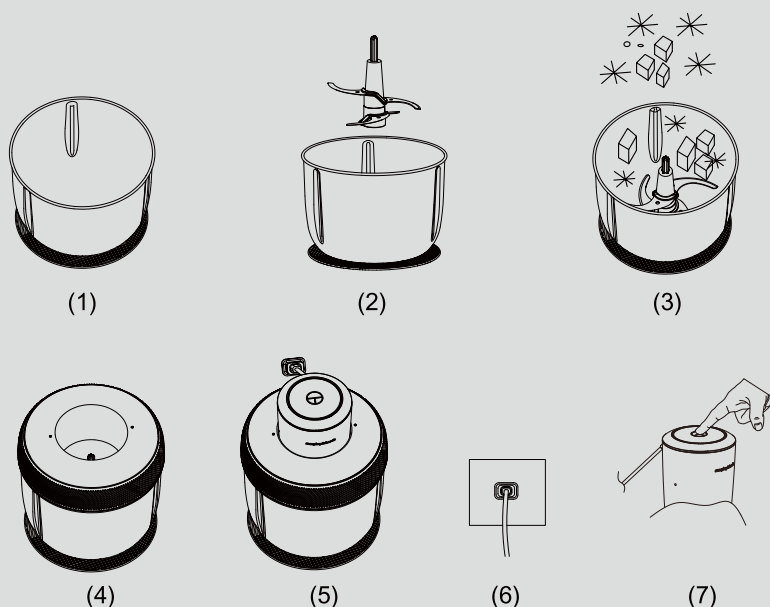 


图10

1. 把不锈钢大碗放置在于绞肉杯垫上，然后把刀组件安装到不锈钢大碗底部的主轴上；

**注意：请勿触碰到刀刃部分，因为其非常锋利。**

2. 把蔬菜类食物放进不锈钢大碗，请参考切碎指引以获得理想的食物状态。

3. 盖上碗盖，然后把主机放置于碗盖相应位置上，参照主机和碗盖上的对位圆点进行对位调整，直至主机与碗盖圆点标识对齐。

4. 按压开关按键并持续保持，产品开始工作，对碗内食物进行切碎处理。（见图10）

**注意：本产品设有一个脉冲按键，请避免直接连续运行电机超过30秒。越长时间连续运转，食物质地越细，对于粗质食物，请使用短时间工作。**

5. 请确保刀片完全停止旋转，方可打开碗盖。拔掉电源插头，拿起主机，然后抓住刀组件的塑料支架部分，提起刀组件。拿起不锈钢碗把里面的食物倒出。请不要把此不锈钢碗用作食物储存使用。
6. 使用时，请确保碗盖三个槽与碗口内的限位对上，对不上请不要强行盖上碗盖，使用完机器后收纳时，三个不锈钢碗需要按小到外套在一起，请不要强行将大不锈钢碗套到小不锈钢碗中去。（见图7）

## 清洁和维护保养

清洁前请保持产品电源处于断开状态。使用后，可用温水/洗洁精/洗碗机对不锈钢碗、刀组件进行清洁；主机不可浸水，请用湿布擦拭清洁主机。使用后请第一时间清洁，避免滋生细菌。

**注意：**清洗刀片时，手不可直接接触刀片，请使用软质清洁工具（如百洁布）清洁。不可使用化学剂、钢质、木质或粗糙物料等清洁工具，避免损伤产品表面光泽。

## 食物切碎指引

食物种类	预处理提示
不锈钢小碗： 1. 坚果（需先烘烤） 2. 曲奇，饼干 3. 面包：新鲜的，烘烤的 4. 婴儿辅食类（鸡胸肉，瘦肉···）	坚果：放入最多200g，然后以切碎30秒、停止1分钟为1周期，进行若干周期操作，直至达到所需切碎程度； 曲奇，饼干：放入最多12块曲奇或饼干，然后以切碎20秒、停止1分钟为1周期，进行若干周期操作，直至达到所需切碎程度； 面包：每次使用一片，撕碎成几块，以切碎20秒、停止1分钟为1周期，进行若干周期操作，直至达到所需切碎程度； 婴儿辅食类：最多放入200g，然后以切碎20秒、停止1分钟为1周期，进行若干周期操作，直至达到所需切碎程度。

食物种类	预处理提示
不锈钢中碗: 1. 新鲜牛肉或其他无骨无筋肉类切成60mm*20mm*20mm大小块状。 2. 2-4个蒜切除根部后掰成蒜瓣状。	牛肉或其他无骨肉类: 最多放入500g, 然后以切碎20秒、停止1分钟为1周期, 进行若干周期操作, 直至达到所需切碎程度; 2-4个蒜切除根部后掰成蒜瓣状: 把2-4个蒜切除根部后掰成蒜瓣状的蒜瓣放入碗内, 压下开关键并保持, 剥蒜棒工作30-60秒。
不锈钢大碗: 1. 水果和蔬菜 (罐装的, 煮过的) 2. 新鲜芹菜, 辣椒和其他多叶类植物	水果和蔬菜: 放入最多500g 切成长块的水果或蔬菜, 以切碎20秒、停止1分钟为1周期, 进行若干周期操作, 直至达到所需切碎程度; 新鲜芹菜, 辣椒和其他多叶类植物: 清洗并完全晾干, 然后以切碎20秒、停止1分钟为1周期, 进行若干周期操作, 直至达到所需切碎程度。

## 注意环保



### 注意环保!

请遵守当地法规: 将废弃的电器产品和设备投入合适的废物回收站。

根据中国电器电子产品有害物质限制使用管理办法  
中国区销售产品有害物质含量信息

有害物质 零部件(型号)	铅(Pb)	汞(Hg)	镉(Cd)	六价铬 (Cr(VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
其它金属结构 件(轴承、装 饰件)	×	○	○	○	○	○
电器件	○	○	×	○	○	○
电机、电源线	×	○	○	○	○	○

○：表示该有害物质在该部件所有均质材料中的含量均在GB/T 26572-2011标准规定的限量要求以下。

×：表示该有害物质至少在该部件的某一均质材料中的含量由于现有技术  
及工艺限制而超出GB/T 26572-2011标准规定的限量要求。

根据中国电子电气产品有害物质限制使用标识要求（SJ/T11364-2014）  
和相关法规，本产品整机符合以下环保使用期限。

**注：**该标示的环保使用期限是指在正常使用条件和温度、湿度，并且  
不包括耗材情况下的使用期限。



整机

## 食品卫生信息及符合性声明标识

产品名称：食物处理器(套娃绞肉机) (JD-376B)

产品类型：食品接触用

部件名称	材质	执行标准	备注
碗盖	SAN	GB4806.6-2016 GB4806.7-2016	/
剥蒜套组件	POM+硅胶	GB4806.6-2016 GB4806.7-2016 GB4806.11-2016	/
刀组件 (刀支架+刀片+ 刀轴)	PA 30Cr13(SUS420J2) 06Cr19Ni10(SUS304)	GB4806.6-2016 GB4806.7-2016 GB4806.9-2016	/
不锈钢碗(包含 平垫圈、固定 轴、轴芯)	06Cr19Ni10 (SUS304)	GB4806.9-2016	/
密封圈	硅胶	GB4806.11-2016	/

## 故障分析及排除

故障	可能性原因分析	解决对策
产品不工作	电源线未插好	检查电源线并保证插到位
	主机与碗盖没有装配到位，没有触发开关连杆	启动前请将主机和碗盖安装到位
	机器故障	联系客服维修
食材打不碎	电源电压过低	可用家用稳压器
	食材太多或太少	请按食谱配方操作
	产品本身故障	联系客服维修
异常杂音	产品磨合	偶然出现属于正常情况
烧焦异味	是否持续长时间运作	电机位于主机内部，原因是碳刷的摩擦和温度过高导致漆包线汽化，但不是产品故障，请随意使用

## 售后服务政策

PandaBrands Inc保证本产品自购买之日起一年内无材料或工艺缺陷，前提是本产品在家环境中使用。本产品有限保修不包括由于不当操作、意外损坏或非专业人员进行或试图进行维修而导致的故障。如果产品在30天内购买，符合上述保修条件的缺陷产品将免费更换或维修。超过30天但在最初购买一年内，产品将免费维修或更换，客户将负责运费。购买一年后，客户将承担零件、人工和运输费用。本产品不用于商业用途，因此，此类商业用途将使本保修失效。欲了解更多信息，请连系客户服务部门 [service@pandabrands.com](mailto:service@pandabrands.com)。



保修证明：

产品名称	
产品型号	
产品编码	
产品日期	
顾客姓名	
顾客电话	
购买地址	
购买商店	
购买凭证号码	
购买日期	

维修记录:

维修日期	故障情况	维修地点	维修结果

# SAFETY PRECAUTIONS

Please read this handbook carefully before using this product. In order to avoid personal injury caused by improper use of appliances, please strictly observe the instructions.

1. Check that the voltage you are using matches the voltage rating of the product.
2. The cover of the bowl may not be opened until the blade stops spinning.
3. The knife assembly is very sharp. Take care when taking down the protective sleeve and cleaning and maintaining, prevent cutting.
4. When removing the plug, grasp the plug and pull out the power cord, and do not pull the cord.
5. The host of the product configuration cannot be used for other purposes.
6. Before cleaning the product, be sure to unplug the power cord; After the normal temperature is restored, the components can be removed or cleaned.
7. Ensure that the power cord is not hung on the edge of the table or counter, or on the surface of the high temperature component.
8. Can not be placed in or near gas cooker, induction cooker, hot oven, etc.
9. During the process of crushing food, the hand or tableware should not touch the blade to avoid a safety risk, resulting in personal injury or damage to the product; If you need to use the blade, you must ensure that the product is stopped before it can be used.
10. Do not immerse the power cord, plug, mainframe in water or other liquids to avoid the risk of fire, leakage of electricity or personal injury.
11. If children are operated on or near to use this product, they must be accompanied by parents for guidance and supervision.
12. Children should be supervised to ensure that they do not play with the appliance.
13. Avoid contact with moving parts.
14. The use of non-factory recommended or sold accessories may cause risks of fire, electricity leakage or personal injury.
15. If the power cord is damaged, it must be replaced by professionals of the manufacturer, its maintenance department or similar departments in order to avoid danger.
16. Appliances can not be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way.
17. In the absence of supervision, the cleaning and maintenance work should not be done by the child.
18. The equipment shall be used according to the instruction manual, not for use by others, and not for outdoor use.
19. Before use, please make sure the mainframe is firmly fixed.
20. Do not attempt to shield the safety interlock of the bowl lid.
21. Appliance must not be immersed in water.
22. Please save this manual.

## **Warning:**

This product is limited to family use only!

To avoid danger of injury, do not take off the main engine and open the bowl cover before the knife assembly stops.

After the food is finished, remove the knife components and deal with the food.

Do not use the hand to handle the food before they are removed.

## WARNING

1. After the food is chopped, first remove the plug, take out the main machine, bowl cover, and then take out the knife assembly, and then deal with the chopped food, and then clean it. Remember that before the knife assembly is taken out, do not handle the food by hand. (see Figure 1)
2. This product uses the resettable temperature control device. When the product runs for a long time, the temperature of the main engine rises. When the temperature exceeds the upper limit of the temperature insurance device, the product automatically stops working. When the temperature naturally drops to the set temperature value, unplug the plug and plug it in again to continue working. When the product stops working, please remove the plug to avoid the danger of misoperation.
3. Do not open the blade until it stops rotating.
4. When taking the cover, remember not to touch the blade, because it is very sharp.
5. When cleaning the knife assembly, it needs to be wiped with a cleaning cloth, and hands cannot touch the blade, because it is very sharp. (see Figure 1)
6. After the work is completed, please do not turn over the knife assembly and insert it on the main engine. Please wipe the main engine with a clean cloth. It is forbidden to flush water. (see Figure 2)
7. After use, the knife assembly should be put on the knife protection cover and put into the bowl to avoid hand injury. (see Figure 3)



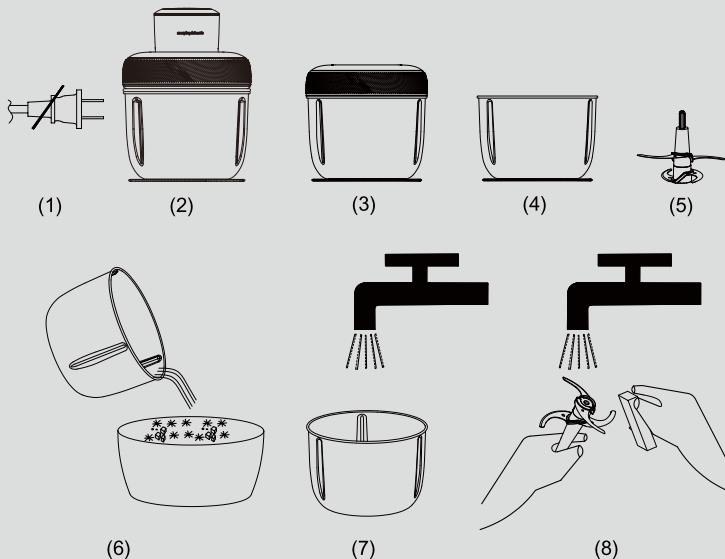 



Fig.1

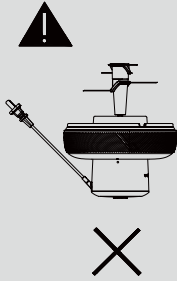 

 (1)

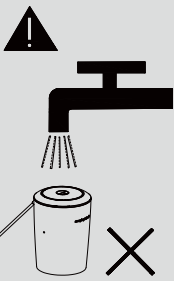

 
(2)

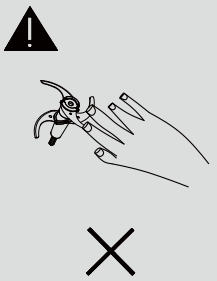


(3)



 (4)

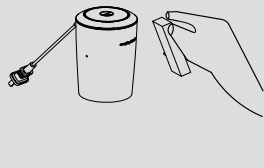


 (5)

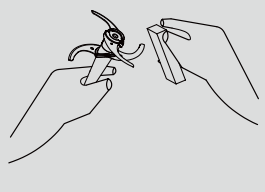


(6)

 
Fig.2

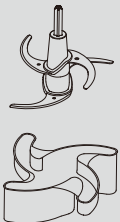

 (1)



 (2)

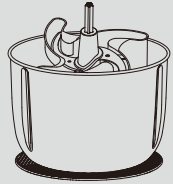


(3)

Fig.3


**Warning:** Do not open the blade before it stops rotating; the product is only for daily home use.

## PRODUCT INTRODUCTION

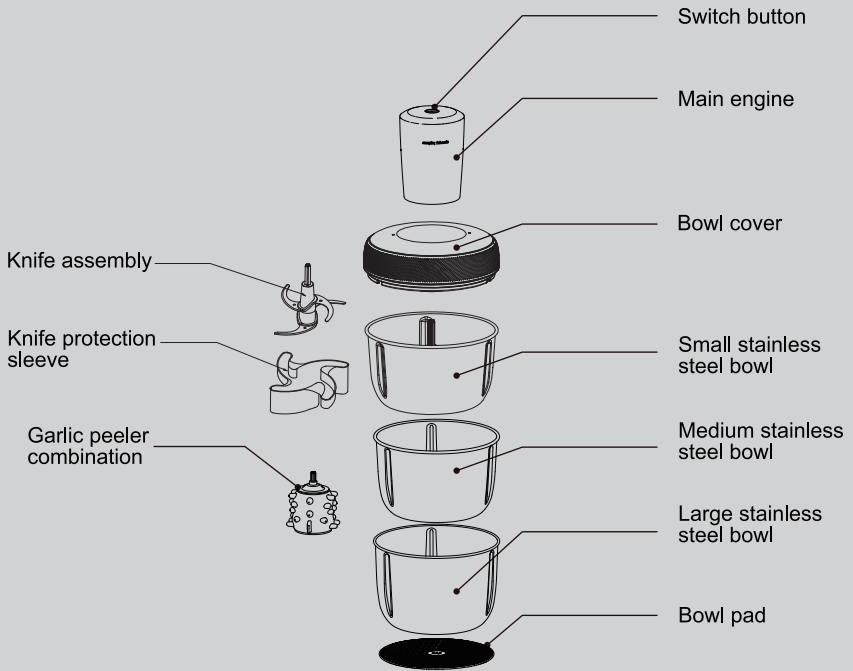 

Model/Product Name	JD-376B
Specifications	120V ~ 60Hz 300W
Capacity	800ml、1200ml、1500ml


## THE CIRCUIT DIAGRAM

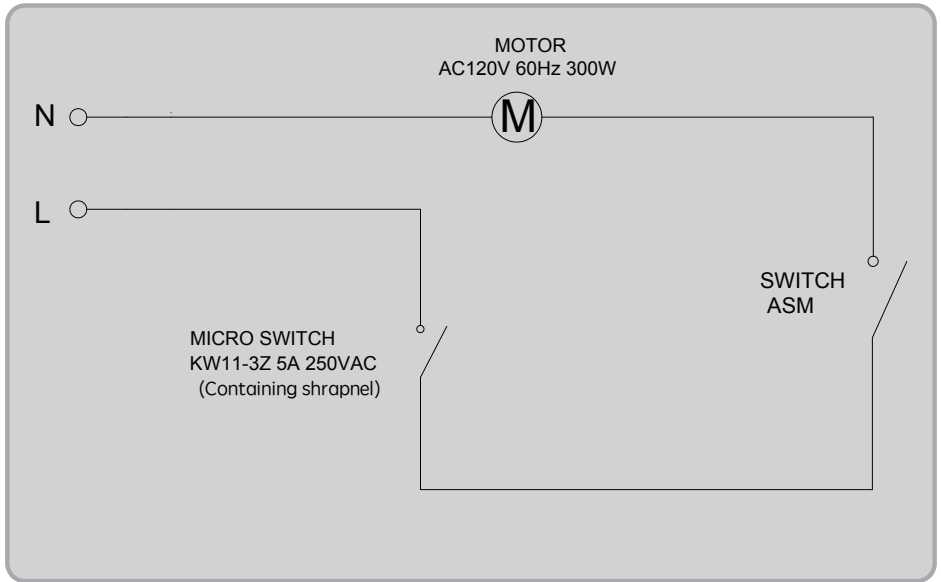 

## FIRST USE


1. Before using this product for the first time, please clean the stainless steel small bowl, medium bowl, large bowl and knife components with soap solution and dry them thoroughly; the stainless steel small bowl, medium bowl and large bowl can be used for dishwasher cleaning; the main engine is wiped with wet cloth and cannot be soaked in water; the knife components can be washed. (see Figure 6)

 2. After cleaning the machine, first put the knife assembly into the bowl, then add the required ingredients to the bowl, cover the bowl cover, plug in the plug power supply, and finally press the switch button down by hand, so that the food ingredients can be cut.

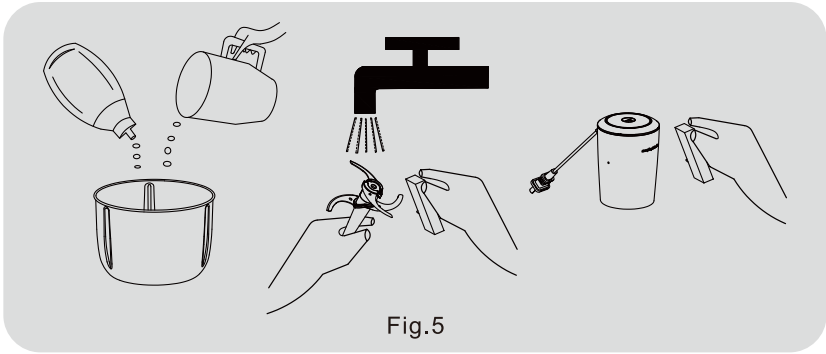

## HOW TO CHOP FOOD
 
### 1. Small stainless steel bowl (see Figure 6)

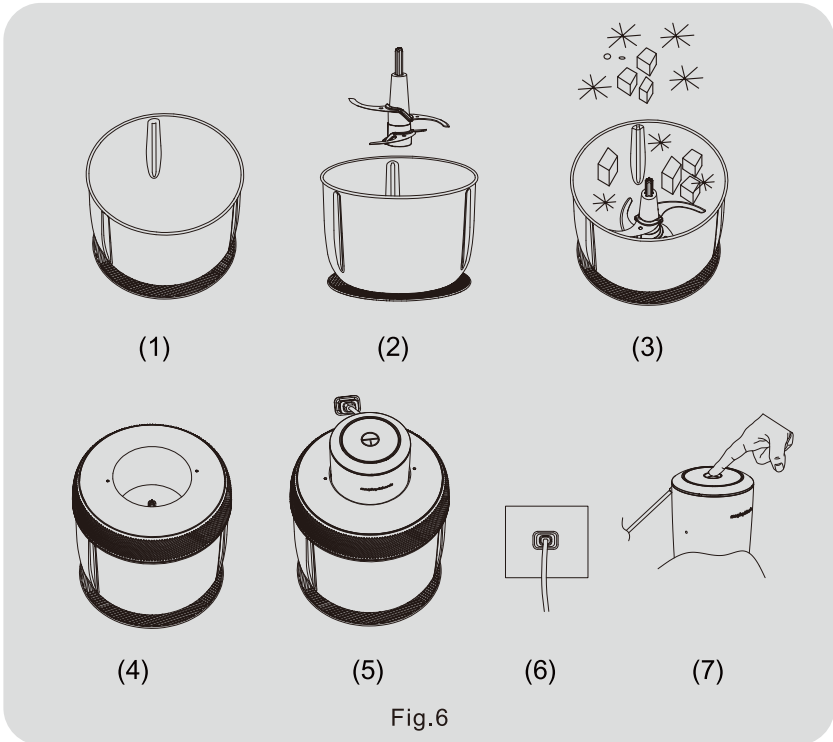




1. Place the small stainless steel bowl on the bowl pad, and then install the knife assembly on the main shaft at the bottom of the small stainless steel bowl; pay attention not to touch the blade part, because it is very sharp.
2. Put cooked food into a small stainless steel bowl. Please refer to the shredding instructions for ideal food condition. Cooked food needs to be cooled.
3. Cover the bowl cover, then place the main engine on the corresponding position of the bowl cover, and adjust the alignment with reference to the alignment dots on the main engine and the bowl cover until the main engine and the bowl cover dot mark are aligned.
4. Press and hold the switch button, the product starts to work, and the food in the bowl is chopped.(see Figure 6)

**Note: This product is equipped with a pulse button, please avoid direct continuous operation of the motor for more than 30 seconds. The longer the continuous operation, the finer the texture of the food. For coarse food, please use a short time to work.**

 5. Please make sure that the blade stops rotating completely before opening the bowl cover. Unplug the power plug, pick up the main engine, then grasp the plastic bracket part of the knife assembly, and lift up the knife assembly. Pick up the stainless steel bowl and pour out the food. Please do not use this stainless steel bowl for food storage.
6. At the beginning of use, please make sure that the three grooves of the bowl cover are aligned with the limit position in the bowl mouth. If not, please do not forcibly cover the bowl cover. After using the machine, the three stainless steel bowls need to be put together as small as large. Please do not forcibly put the large stainless steel bowl into the small stainless steel bowl. (see Figure 7)


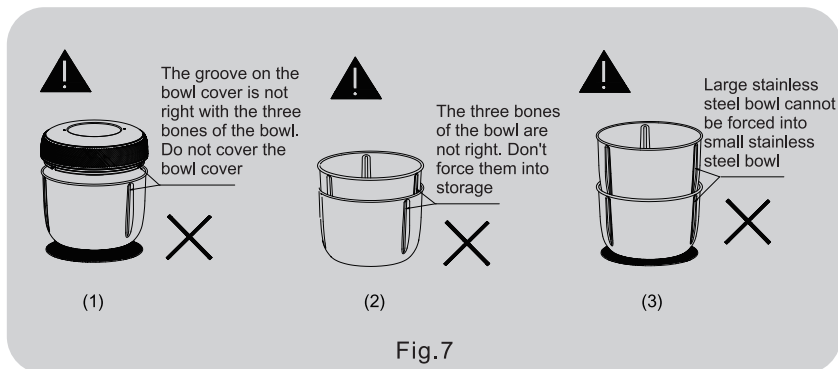


## 2. Medium stainless steel bowl (see Figure 8)

1. Place the medium stainless steel bowl on the ground meat cup pad, and then install the knife assembly on the main shaft at the bottom of the medium stainless steel bowl;

**Note: do not touch the blade because it is very sharp.**

  2. Put the raw meat into a medium stainless steel bowl. Please refer to the shredding instructions for ideal food condition.
3. Cover the bowl cover, then place the main engine on the corresponding position of the bowl cover, and adjust the alignment with reference to the alignment dots on the main engine and the bowl cover until the main engine and the bowl cover dot mark are aligned.

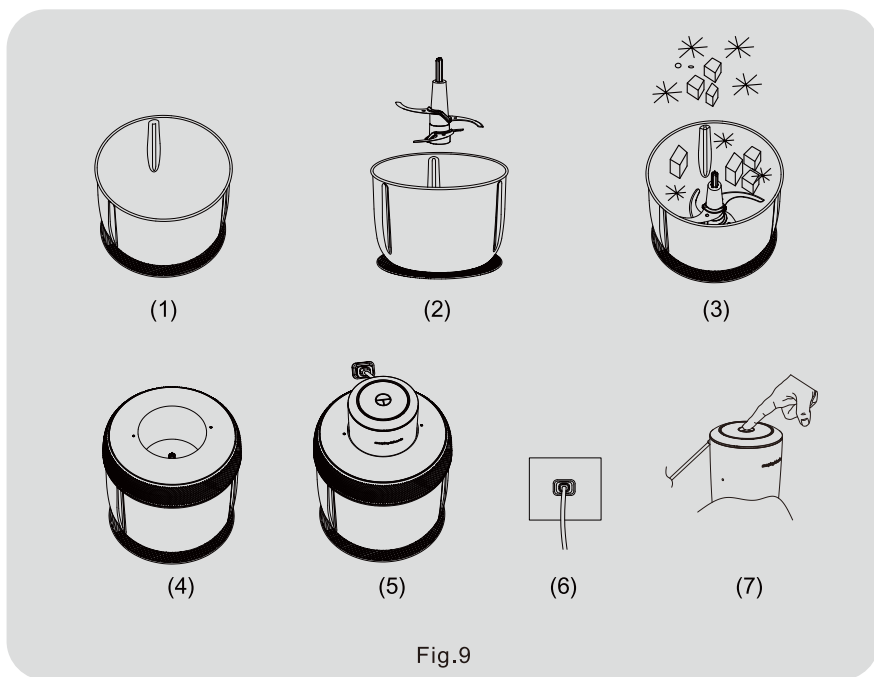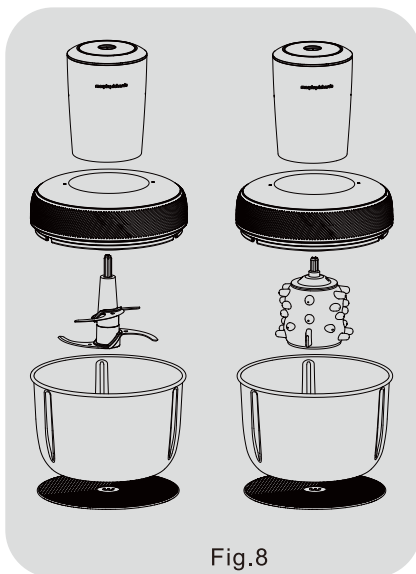

4. Press and hold the switch button, the product starts to work, and the food in the bowl is chopped.(see Figure 9)

**Note: This product is equipped with a pulse button, please avoid direct continuous operation of the motor for more than 30 seconds. The longer the continuous operation, the finer the texture of the food. For coarse food, please use a short time to work.**

5. Please make sure that the blade stops rotating completely before opening the bowl cover. Unplug the power plug, pick up the host, then grasp the plastic bracket part of the knife assembly, and lift up the knife assembly. Pick up the stainless steel bowl and pour out the food. Please do not use this stainless steel bowl for food storage.

(See Figure 1 for usage)

## **Garlic peeling**

1. Place the medium stainless steel bowl on the bowl pad, and then install the Garlic peeler combination on the main shaft at the bottom of the medium stainless steel bowl; Cut the roots of 2-4 garlic and break them into cloves and put them into a bowl.
2. Cover the bowl cover, then place the main engine on the corresponding position of the bowl cover, and adjust the alignment with reference to the alignment dots on the main engine and the bowl cover until the main engine and the bowl cover dot mark are aligned.
3. Press the switch button and keep it on. The product starts to work, Peel the garlic in the bowl. The peeling time is about 20-60 seconds.

**Please make sure the garlic peeler stops rotating completely before opening the bowl cover. Unplug the power plug, pick up the host, then grasp the plastic bracket part of the garlic stick, lift the garlic stick, and pour out the food inside. Please do not use the stainless steel bowl as food storage.**

4. When using, please make sure that the three grooves of the bowl cover are aligned with the limit position in the bowl mouth. If not, please do not forcibly cover the bowl cover. After using the machine, the three stainless steel bowls need to be put together as small as large. Please do not forcibly put the large stainless steel bowl into the small stainless steel bowl. (see Figure 7)

**Note: garlic peeler combination can only be used in stainless steel medium bowl, stainless steel small bowl, large bowl can not be used!**

### 3. Large stainless steel bowl (see Figure 10)

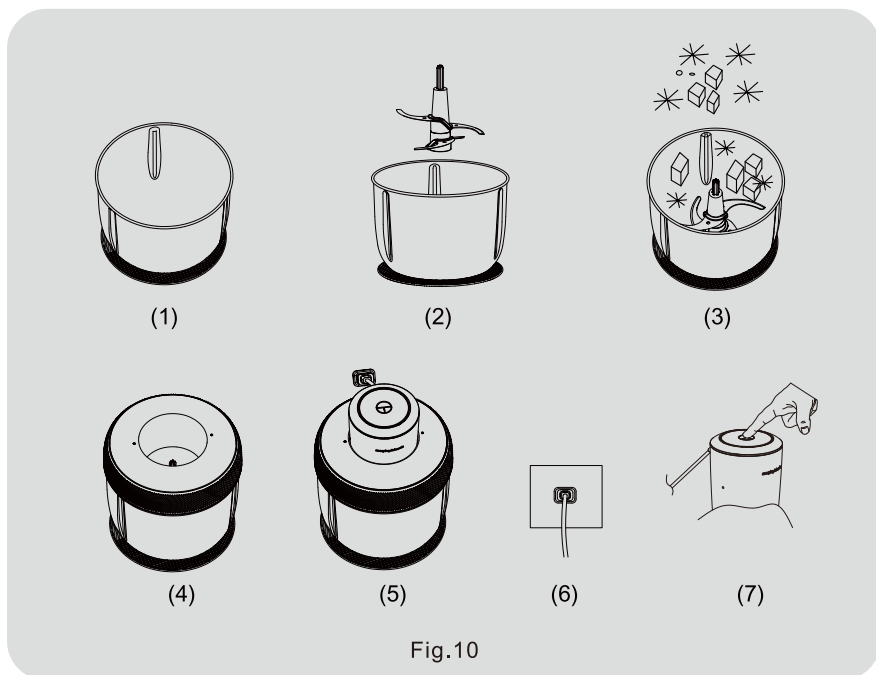 


Fig.10

1. Place the large stainless steel bowl on the bowl pad, and then install the knife assembly on the main shaft at the bottom of the large stainless steel bowl.

**Note: Pay attention not to touch the blade part, because it is very sharp.**

2. Put vegetables into a large stainless steel bowl. Please refer to the shredding instructions for ideal food condition. Cooked food needs to be cooled.
3. Cover the bowl cover, then place the main engine on the corresponding position of the bowl cover, and adjust the alignment with reference to the alignment dots on the main engine and the bowl cover until the main engine and the bowl cover dot mark are aligned.
4. Press and hold the switch button, the product starts to work, and the food in the bowl is chopped.(see Figure 10)

**Note: This product is equipped with a pulse button, please avoid direct continuous operation of the motor for more than 30 seconds. The longer the continuous operation, the finer the texture of the food. For coarse food, please use a short time to work.**

5. Please make sure that the blade stops rotating completely before opening the bowl cover. Unplug the power plug, pick up the host, then grasp the plastic bracket part of the knife assembly, and lift up the knife assembly. Pick up the stainless steel bowl and pour out the food. Please do not use this stainless steel bowl for food storage.
6. At the beginning of use, please make sure that the three grooves of the bowl cover are aligned with the limit position in the bowl mouth. If not, please do not forcibly cover the bowl cover. After using the machine, the three stainless steel bowls need to be put together as small as large. Please do not forcibly put the large stainless steel bowl into the small stainless steel bowl. (see Figure 7)

## CLEANING AND MAINTENANCE

Please keep the power supply of the product disconnected before cleaning. After use, the stainless steel bowl and knife components can be cleaned with warm water / detergent / dishwasher; the main machine can not be immersed in water, please use a wet cloth to clean the main machine. Please clean it immediately after use to avoid bacteria.

**Note: When cleaning the blade, do not touch the blade directly. Please use soft cleaning tools (such as cleaning cloth) to clean it. Do not use cleaning tools such as chemical agents, steel, wood or coarse materials to avoid damaging the product surface luster.**

## FOOD SHREDDING GUIDELINES

Types of food	Preprocessing tips
Small stainless steel bowl: 1. Nuts (roasted first) 2. Cookies, biscuits 3. Bread: fresh, baked 4. Baby complementary food (chicken breast, lean meat...)	Nuts: put up to 200g, then cut for 30 seconds, stop for 1 minute as a cycle, carry out several cycles of operation, until the required degree of cutting is reached; Cookies, cookies: add up to 12 cookies or biscuits, then cut for 20 seconds, stop for 1 minute as a cycle, carry out several cycles of operation, until the required degree of cutting is reached;

Types of food	Preprocessing tips
<p>Small stainless steel bowl:</p> <ol style="list-style-type: none"> <li>1. Nuts (roasted first)</li> <li>2. Cookies, biscuits</li> <li>3. Bread: fresh, baked</li> <li>4. Baby complementary food (chicken breast, lean meat...)</li> </ol>	<p>Bread: use one piece at a time, tear it into pieces, then cut for 20 seconds, stop for 1 minute as a cycle, carry out several cycles of operation, until the required degree of cutting is reached;</p> <p>Complementary food for infants: put up to 200g, then cut for 20 seconds, stop for 1 minute as a cycle, carry out several cycles of operation, until the required degree of cutting is reached;</p>
<p>Medium stainless steel bowl:</p> <ol style="list-style-type: none"> <li>1. Cut fresh beef or other boneless and gluten free meat into 60mm * 20mm * 20mm blocks.</li> <li>2. Cut 2-4 garlic roots and break them into cloves.</li> </ol>	<p>Beef or other boneless meat: put 500g at most, then cut for 20 seconds, stop for 1 minute as a cycle, carry out several cycles of operation, until the required degree of cutting is reached;</p> <p>Cut the roots of 2-4 garlic and break them into cloves: cut the roots of 2-4 garlic and put the cloves into a bowl, press down the key to open and keep, peel garlic stick work for for 30-60 seconds.</p>
<p>Large stainless steel bowl:</p> <ol style="list-style-type: none"> <li>1. Fruits and vegetables (canned, boiled)</li> <li>2. Fresh celery, pepper and other leafy plants</li> </ol>	<p>Fruits and vegetables: add up to 500g of chopped fruits or vegetables, then cut for 20 seconds, stop for 1 minute as a cycle, carry out several cycles of operation, until the required degree of cutting is reached;</p> <p>Fresh celery, peppers and other leafy plants: wash and dry completely, then cut for 20 seconds, stop for 1 minute as a cycle, carry out several cycles of operation, until the required degree of cutting is reached;</p>

## ATTENTION ENVIRONMENT PROTECTION



### Attention Environment Protection

Please obey local law: put wasted electric products and devices into proper waste recycling station.

## Analysis of common faults and associated removing methods

Faults	Cause analysis	Removing method
Machine do not work	The power cord is not plugged in properly	Check the power cord and ensure it is plugged in place
	The main unit and bowl cover are not assembled in place, and there is no trigger switch connecting rod.	Please install the host and bowl cover in place before starting
	The machine broke down	Contact customer service for maintenance
The food ingredients won't break	The supply voltage is too low	Available household voltage regulators
	Quantity of ingredients too many or too few	Please follow the recipe
	The machine broke down	Contact customer service for maintenance
Abnormal noise	Product running in	Accidental occurrence is normal
Burning smell	Does it last for a long time	The motor is located inside the main engine because the friction and high temperature of the carbon brush lead to the vaporization of the enameled wire, but it is not a product fault. Please use it freely

## Customer Service

PandaBrands Inc warranties this product to be free from defects in materials or craftsmanship for a period of one year following the date of purchase, provided that the product is used in a home environment. This limited warranty does not cover failure due to abusive operations, accidental damage or when repairs have been made or attempted by non professional. A defective product meeting the above warranty conditions set forth herein will be replaced or repaired at no charge if the product is purchased within 30 days. Beyond 30 days but within One year of original purchases, the product will be repaired or replaced free of charge and customer will be responsible for shipping charges. Beyond One Year of original purchases, customer will be responsible for parts, labor and shipping charges. This product is not intended for commercial use, and accordingly, such commercial usage will void this warranty. For more information, please contact the customer service at [service@pandabrand.com](mailto:service@pandabrand.com)



更多新电, 请扫一扫



更多食谱, 请扫一扫

Imported and distributed by: Pandabrands Inc.  
Email: [business@pandabrands.com](mailto:business@pandabrands.com)  
Customer service: [service@pandabrands.com](mailto:service@pandabrands.com)